


## Jiebao 60 Quick Installation Manual

### 1.1 Description of the main interfaces for wiring the device:

USB for storing call recordings, Lan: for connecting to the local network and accessing the network switch, ports 1-4 for connecting to the PSTN phone line

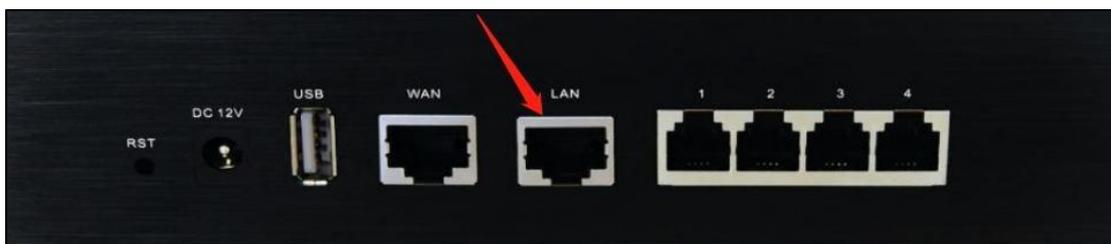

### 1.2 Device Connection:

The default IP address of the device is 192.168.6.200. Modify the IP address of the PC so that the IP address of the device's LAN port is in the same network segment and then connect it to the LAN.

### 1.3 Device Login

Enter 192.168.6.200 in your browser to enter the login screen, and enter your username and password to enter the configuration screen.

Default account password admin, Eq@PaSsW0rd

### 1.4 Initial Configuration:

After logging in to the device normally, you can change the LAN port IP of the device according to your own network condition


Network Configuration>LAN Configuration>Static IP address

The computer connects to the device (same network segment), modifies the network and then reboots the device to take effect. After rebooting, access the new address to enter the system.



### 1.5 Base Configuration:


- 1) New extension account range: pbx Basic Functions > General Settings > Extension Range Settings

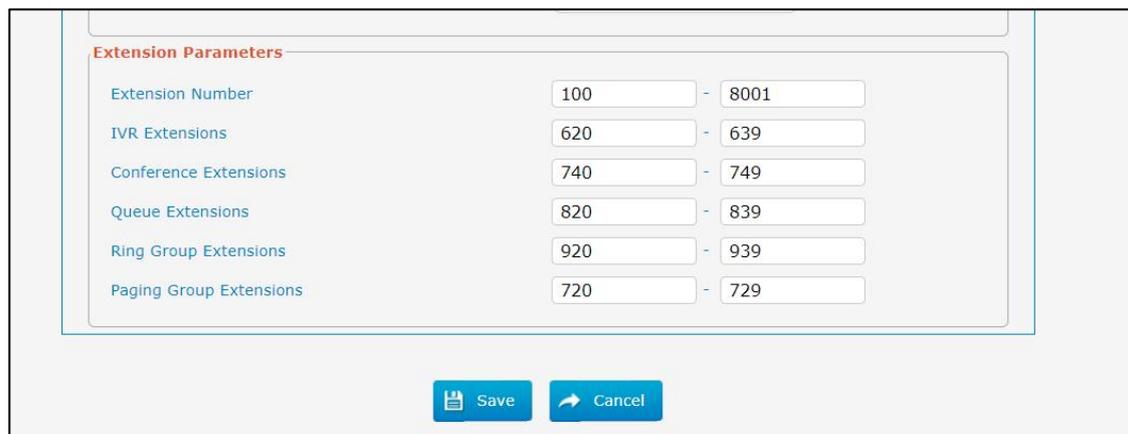

- 2) Add SIP extension number: PBX Basic > Extension > Add



3) Details of the interface is as follows: fill in the Register Name and Password, click save

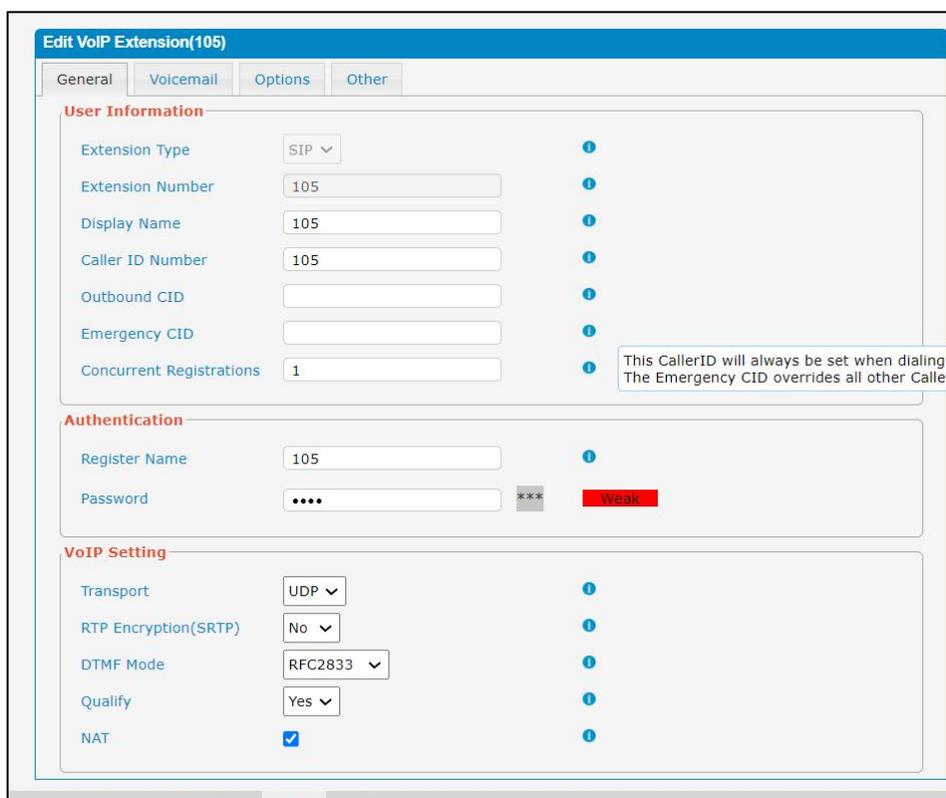

4) Next the phone can be registered using the extension number we created.

## 1.6 Phone line configuration

Ask an Equinet technical engineer for details.