

1. IP Phone Installation


EQ-J4PG supports POE supply and power adapter(DC5V2A).



2. If connect to a POE Switch with DHCP, go to Menu>Status to check the IP.



Without DHCP, unable to get a IP. We should set a IP manually. Go to **Menu>System(password:123)>Network>Network>IPv4**, change the Network mode to Static, fill in your IP.

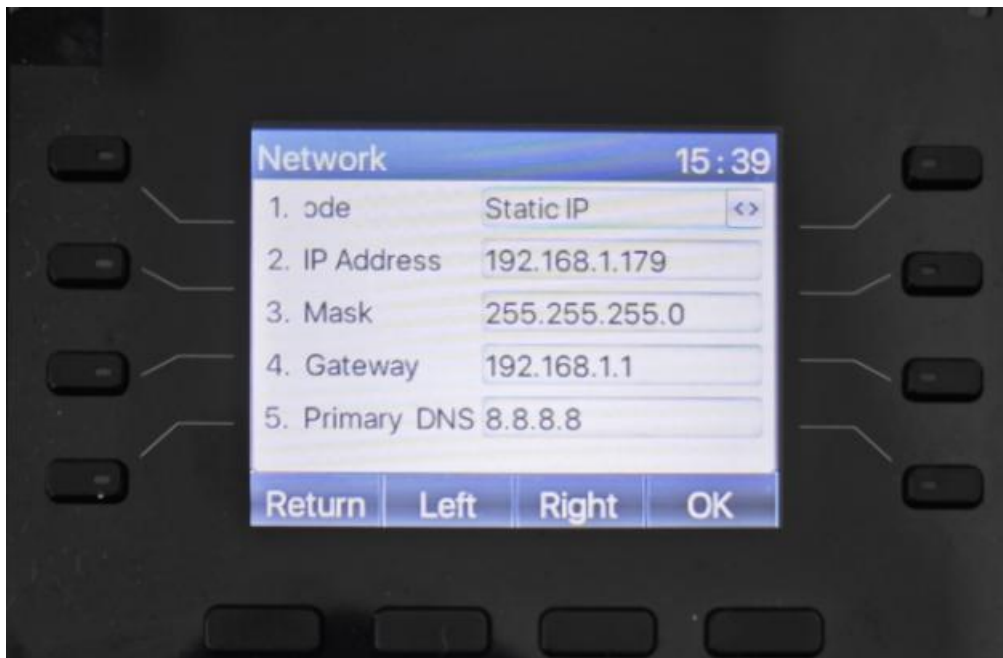

Wi-Fi Connecting


EQ-J4PG supports wireless Internet access and requires the use of a USB Wi-Fi adapter specified by location. Go to **Menu>Basic>WLAN**, enable

the WLAN and connect your network in available network.




3. Enter the IP on the browser(recommend Google Chrome)

Both default username and password are admin

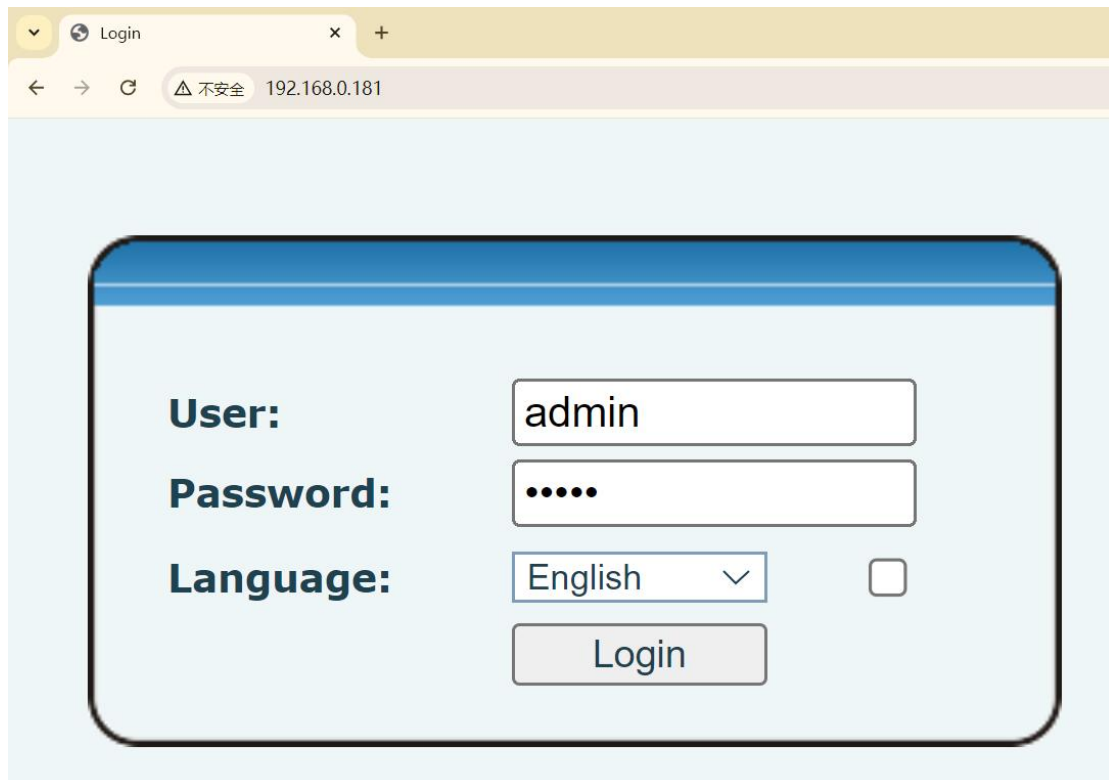

4. Network Setting.

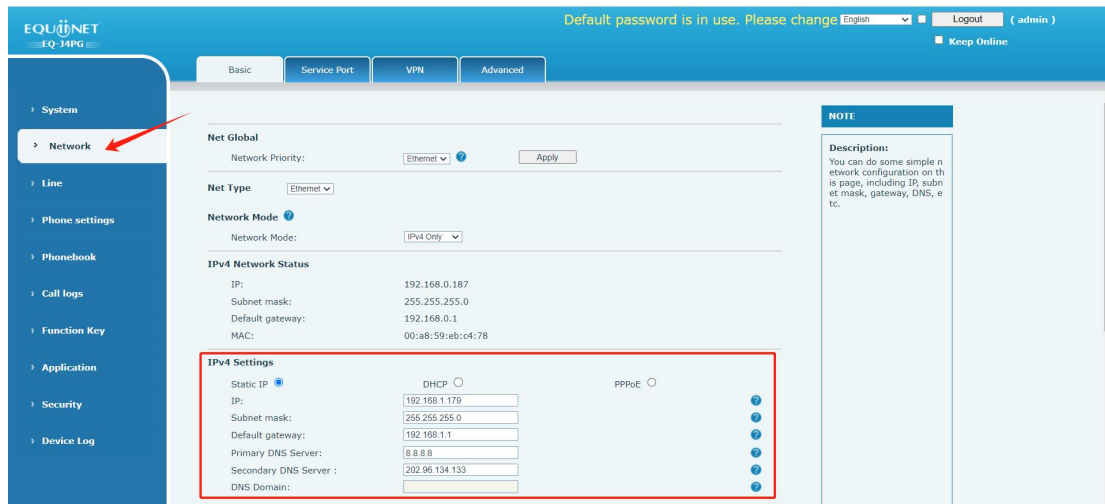

Default password is in use. Please change English Logout (admin) Keep Online

Basic Service Port VPN Advanced

System

Network

Line

Phone settings

Phonebook

Call logs

Function Key

Application

Security

Device Log

Net Global

Network Priority: Ethernet Apply

Net Type: Ethernet

Network Mode: IPv4 Only

IPv4 Network Status

IP: 192.168.0.187

Subnet mask: 255.255.255.0

Default gateway: 192.168.0.1

MAC: 00:a8:59:eb:c4:78

IPv4 Settings

Static IP DHCP PPPoE

IP: 192.168.1.179

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.1

Primary DNS Server: 8.8.8.8

Secondary DNS Server: 202.96.134.133


DNS Domain:

NOTE

Description: You can do some simple network configuration on this page, including IP, subnet mask, gateway, DNS, etc.

5. SIP Setting

Line>SIP. The picture below only for reference, fill in your actual info please. Then click on supply to save.

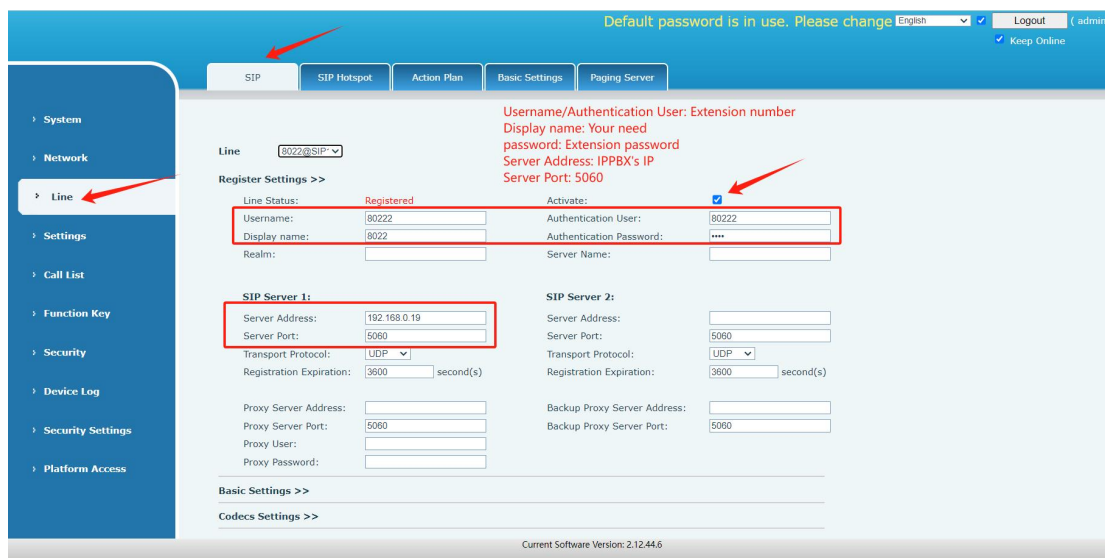

Default password is in use. Please change English Logout (admin) Keep Online

SIP SIP Hotspot Action Plan Basic Settings Paging Server

System

Network

Line

Settings

Call List

Function Key

Security

Device Log

Security Settings

Platform Access

Line: 8022@SIP

Register Settings >>

Line Status: Registered Activate: [checked]

Username: 80222 Authentication User: 80222

Display name: 8022 Authentication Password: ****

Realname: Server Name:

SIP Server 1:

Server Address: 192.168.0.19

Server Port: 5060

Transport Protocol: UDP

Registration Expiration: 3600 second(s)

Proxy Server Address:

Proxy Server Port: 5060

Proxy User:

Proxy Password:

SIP Server 2:

Server Address:

Server Port: 5060

Transport Protocol: UDP

Registration Expiration: 3600 second(s)

Backup Proxy Server Address:

Backup Proxy Server Port: 5060

Basic Settings >>

Codecs Settings >>

Current Software Version: 2.12.44.6

Username/Authentication User: Extension number

Display name: Your need

password: Extension password

Server Address: IPPBX's IP

Server Port: 5060


It can also be configured on the phone

Go to Menu>System(Passwd:123)>Accounts,select a SIP to configure.



Codecs Settings

Audio Codecs. If you do not use such G.722 codecs etc. We recommend only enable G.711U&G.711A.

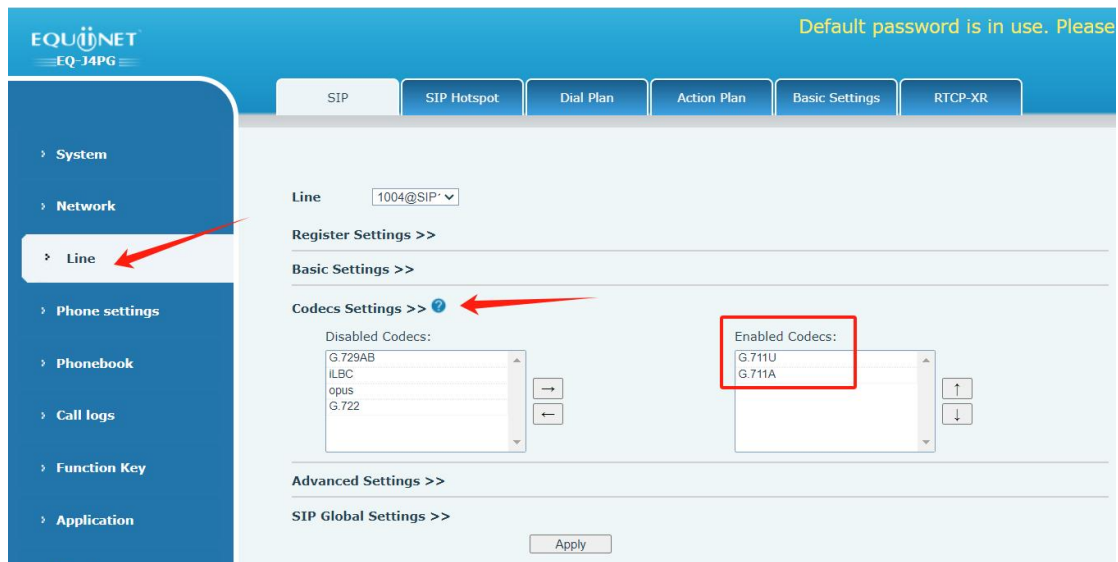

6. Volume Setting. Menu>Basic>Voice Volume

