

1. IP Phone Installation

EQ-J30P supports POE supply and power adapter(DC5V0.6A).



2. If connect to a POE Switch with DHCP, go to Menu>Status to check the IP.



Without DHCP, unable to get a IP. We should set a IP manually. Go to **Menu>System(password:123)>Network>Network>IPv4**, change the Network mode to Static, fill in your IP.



3. Enter the IP on the browser(recommend Google Chrome)

Both default username and password are admin

Browser: Login | 192.168.0.181

User: admin

Password:

Language: English

Login

4. Network Setting.

Browser: VoIP | 192.168.0.181

Default password

Basic | Service Port | VPN | Advanced

System

Network

Line

Phone settings

Phonebook

Call logs

Function Key

Application

Security

Device Log

Network Mode: IPv4 Only

IPV4 Network Status

IP:	192.168.0.181
Subnet mask:	255.255.255.0
Default gateway:	192.168.0.1
MAC:	00:a8:59:ea:8f:17

IPV4 Settings


Static IP DHCP PPPoE

IP:	192.168.1.179
Subnet mask:	255.255.255.0
Default gateway:	192.168.1.1
Primary DNS Server:	8.8.8.8
Secondary DNS Server :	202.96.134.133
DNS Domain:	

Apply

5. SIP Setting

Line>SIP. The picture below only for reference, fill in your actual info please. Then click on supply to save.

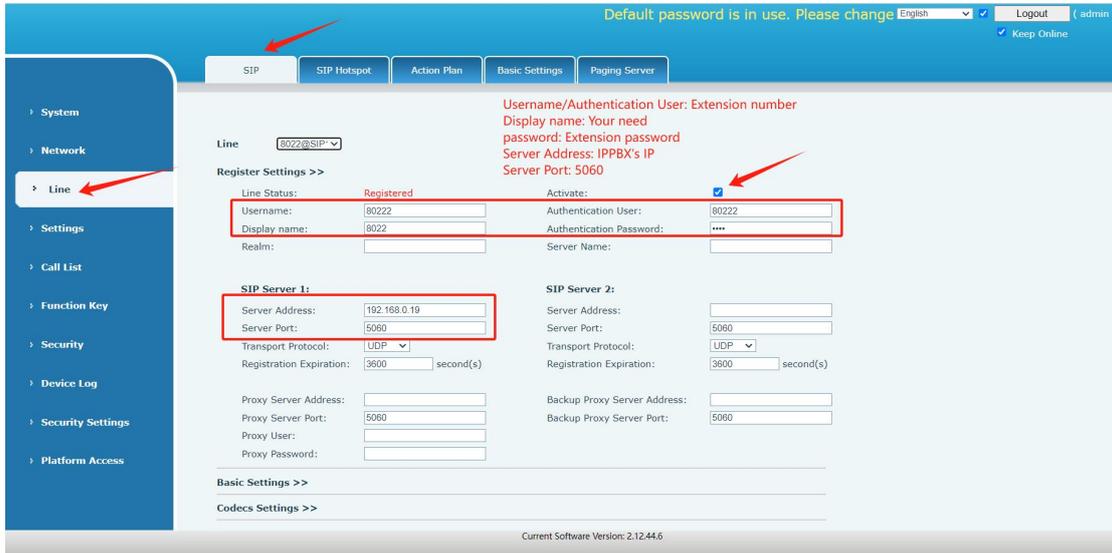


It can also be configured on the phone

Go to Menu>System(Password:123)>Accounts,select a SIP to configure.



Codecs Settings

Audio Codecs. If you do not use such G.722 codecs etc. We recommend only enable G.711U&G.711A.

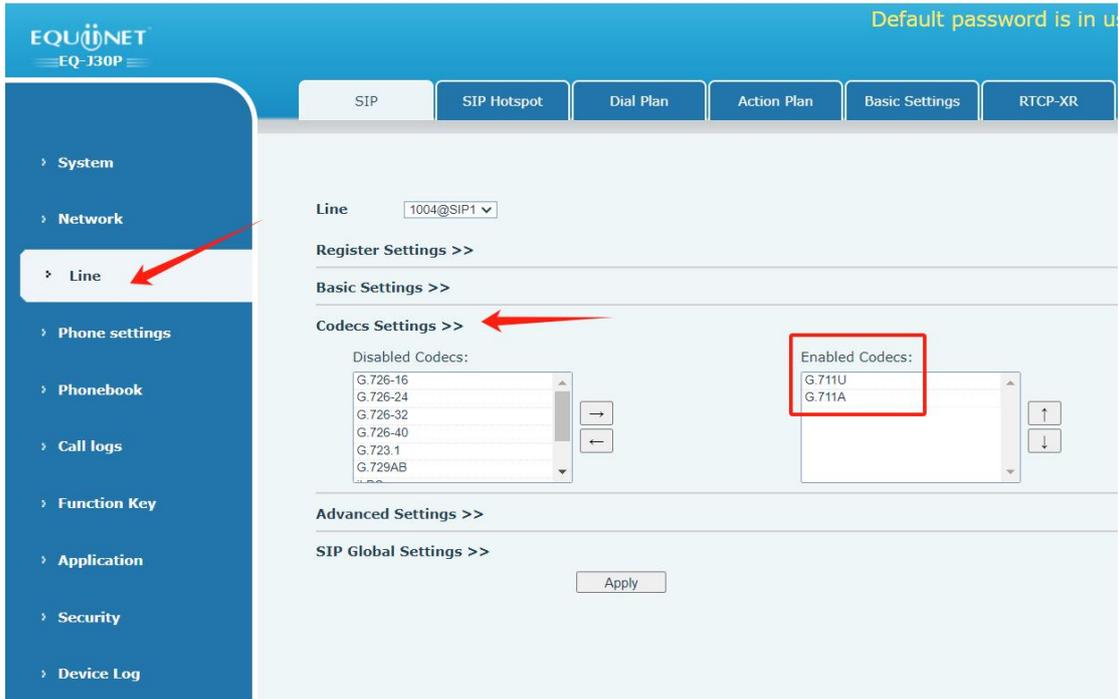

6. Volume Setting. Menu>Basic>Voice Volume

