


1. IP Phone Installation


EQ-X7A supports POE supply and power adapter(DC5V2A).




2. If connect to a POE Switch with DHCP, go to Phone Settings>Network to check the IP.

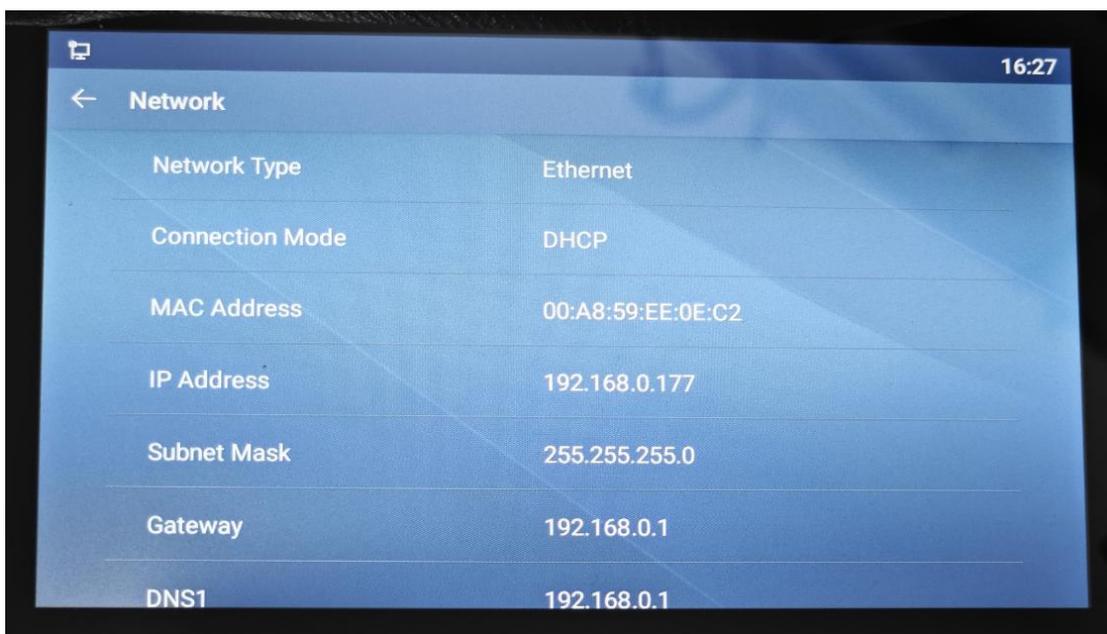


Without DHCP, unable to get a IP. We should set a IP manually. Go to Phone Settings>Ethernet, change the Network mode to Static, modify the IP and click on save.

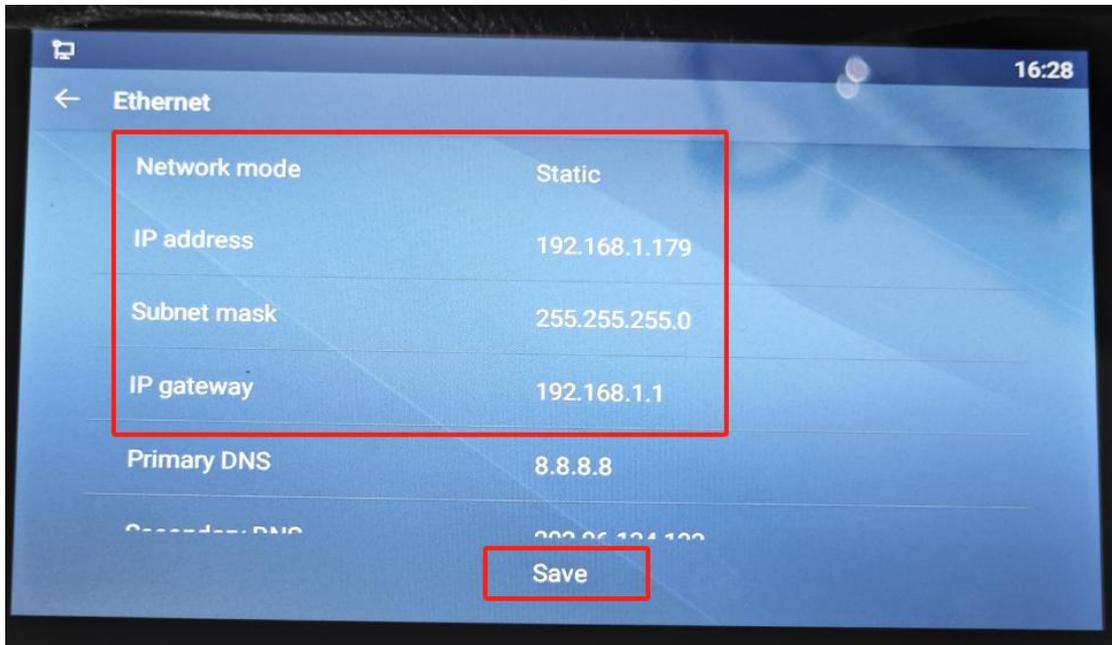


If you need to connect to WIFI, drag down from the top, long press the Wi-Fi.

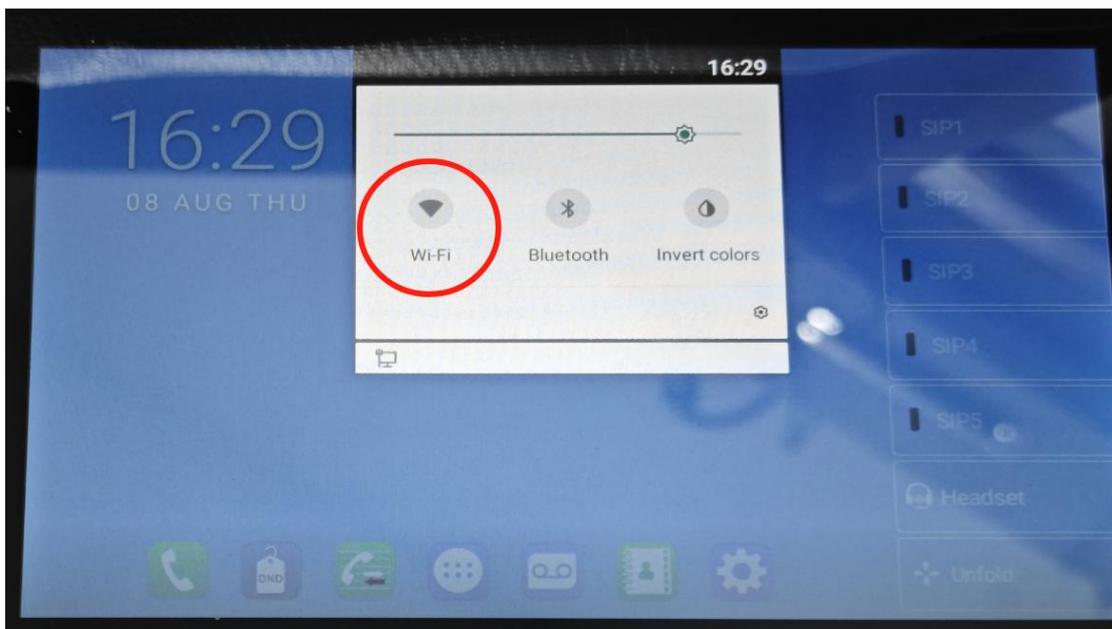

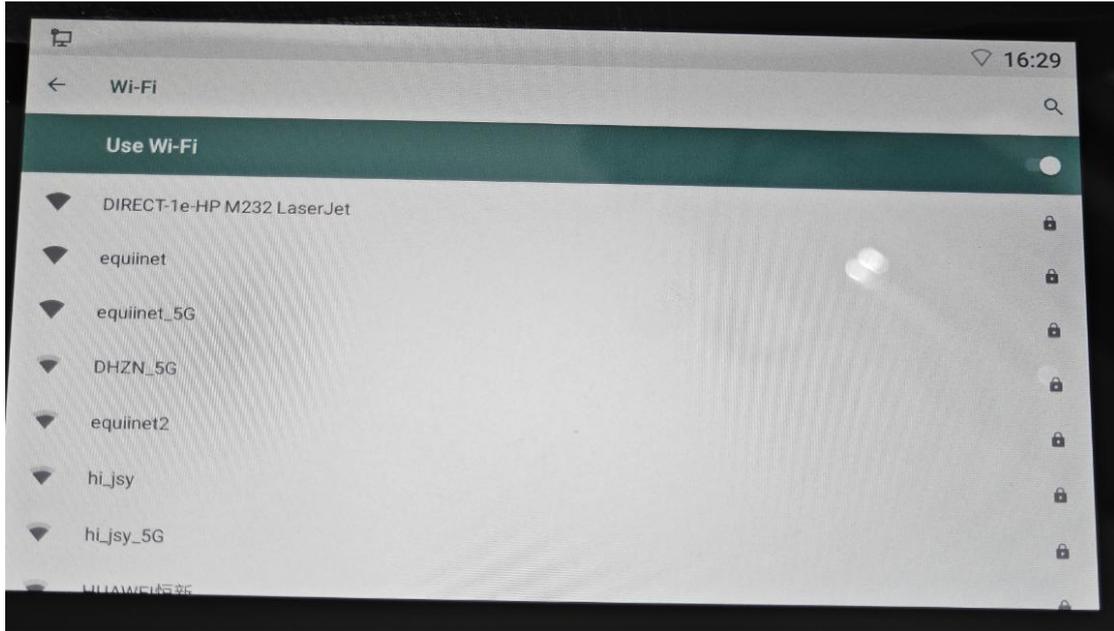


3. Enter the IP on the browser(recommend Google Chrome)

Both default username and password are admin

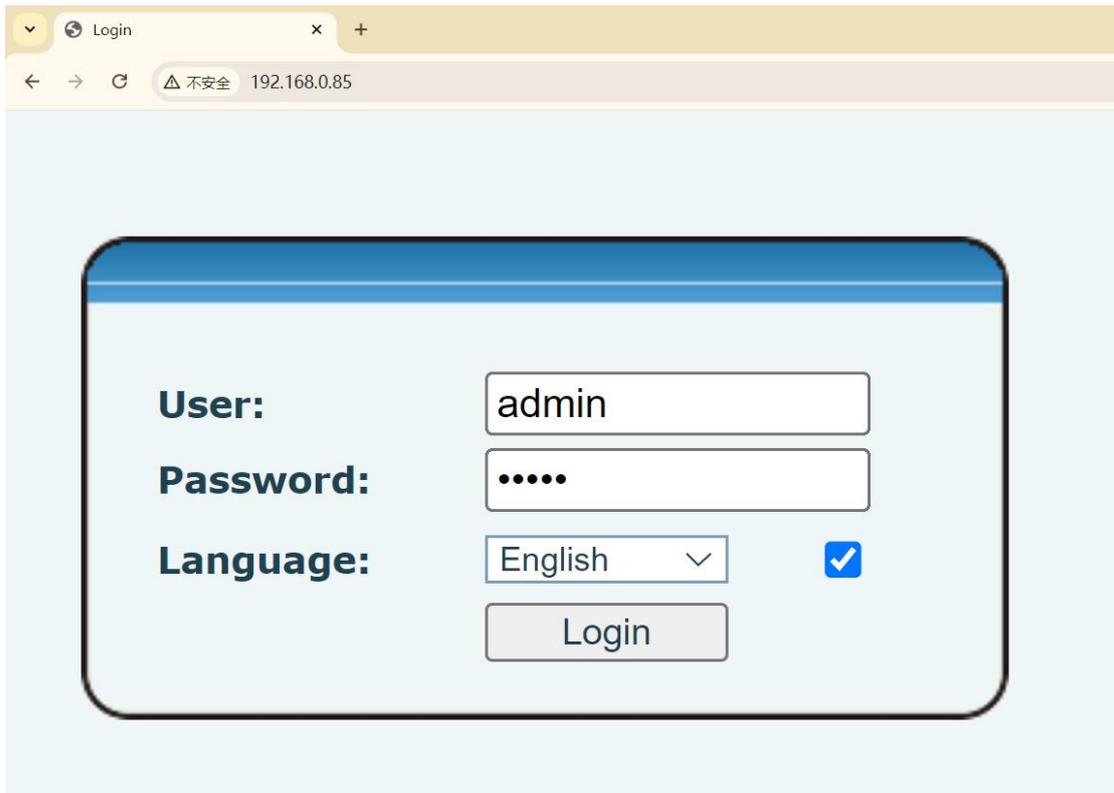


4. Network Setting.

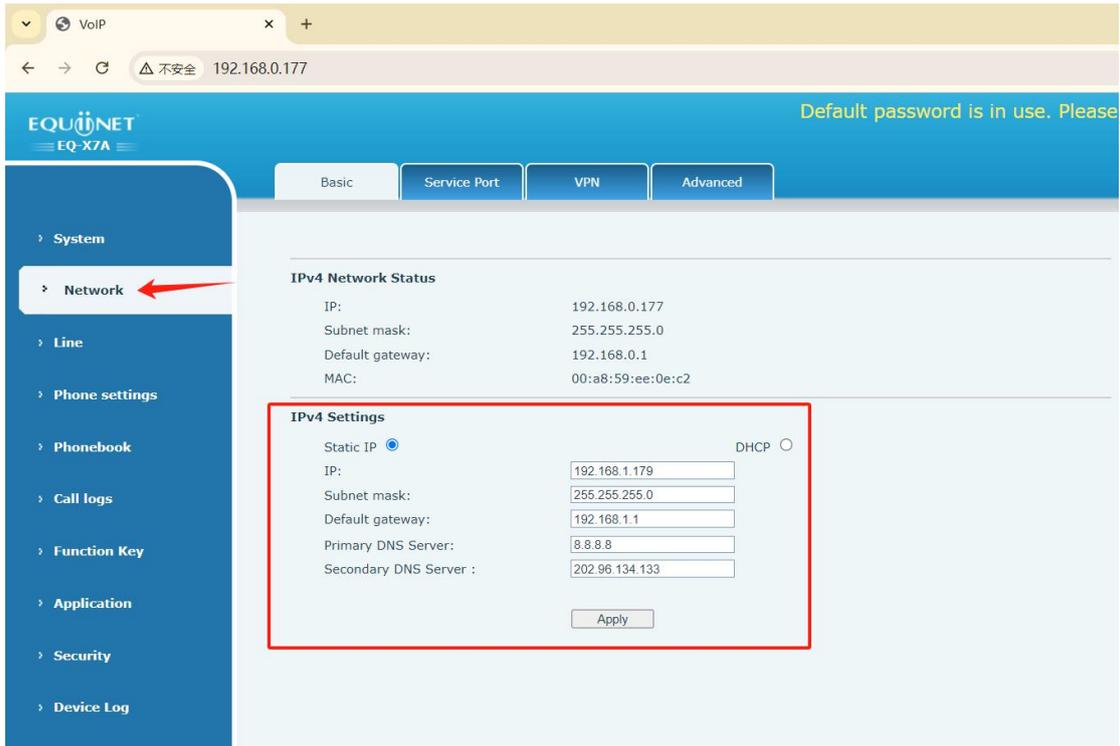

5. SIP Setting


Line>SIP. The pic below only for reference, fill in your actual info please.

Then click on supply to save.

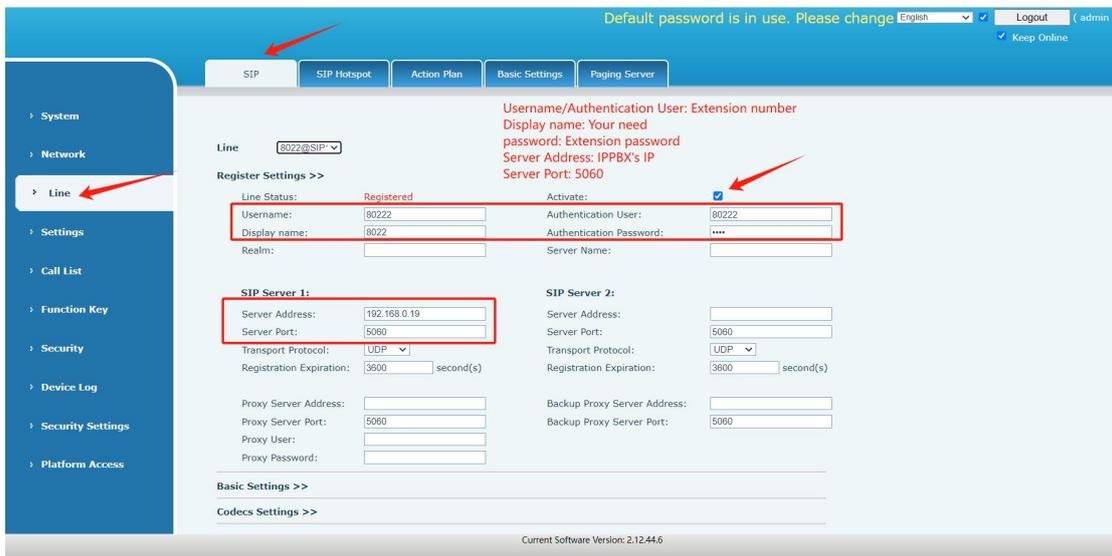


It can also be configured on the phone

Go to Phone Settings>Account>Line, select [Register Account(password: admin)] to configure the SIP on the phone.

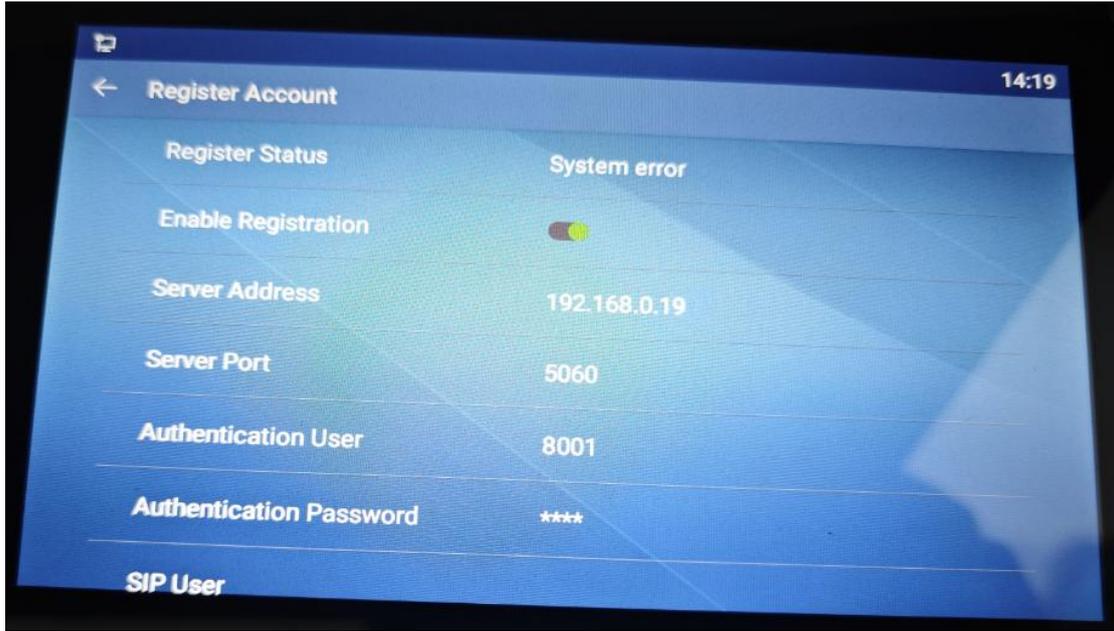


Codecs Settings

Audio Codecs. If you do not need such G.722 codecs etc. We recommend only enable G.711U&G.711A.

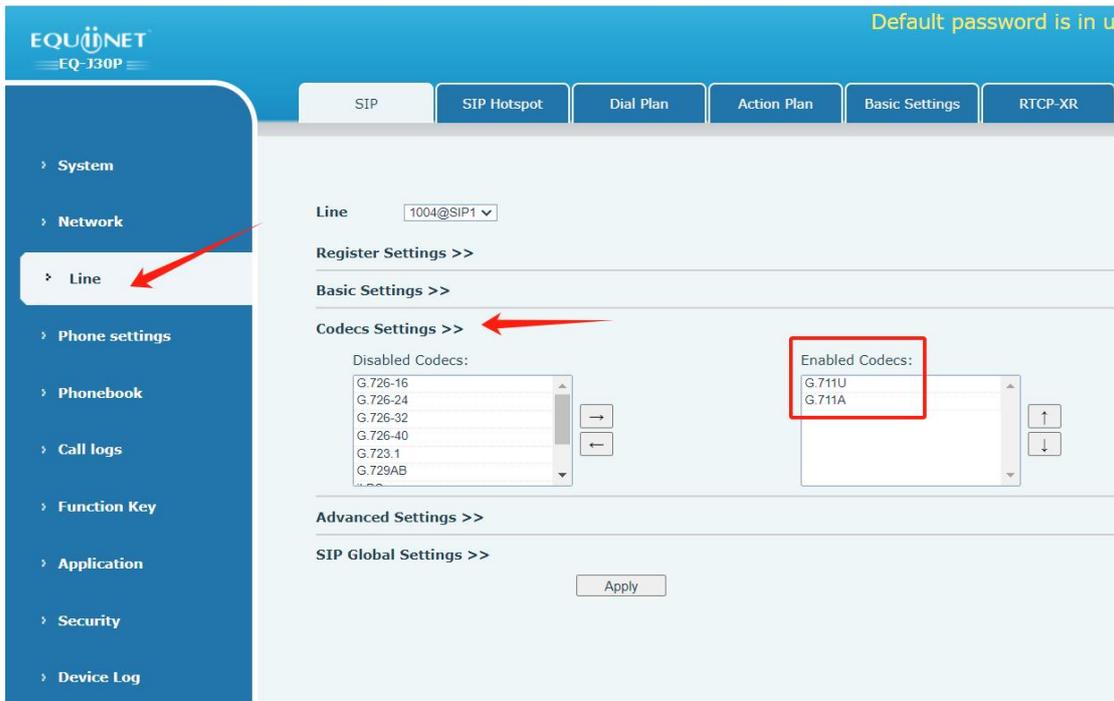


Video Codecs. Enable H.264

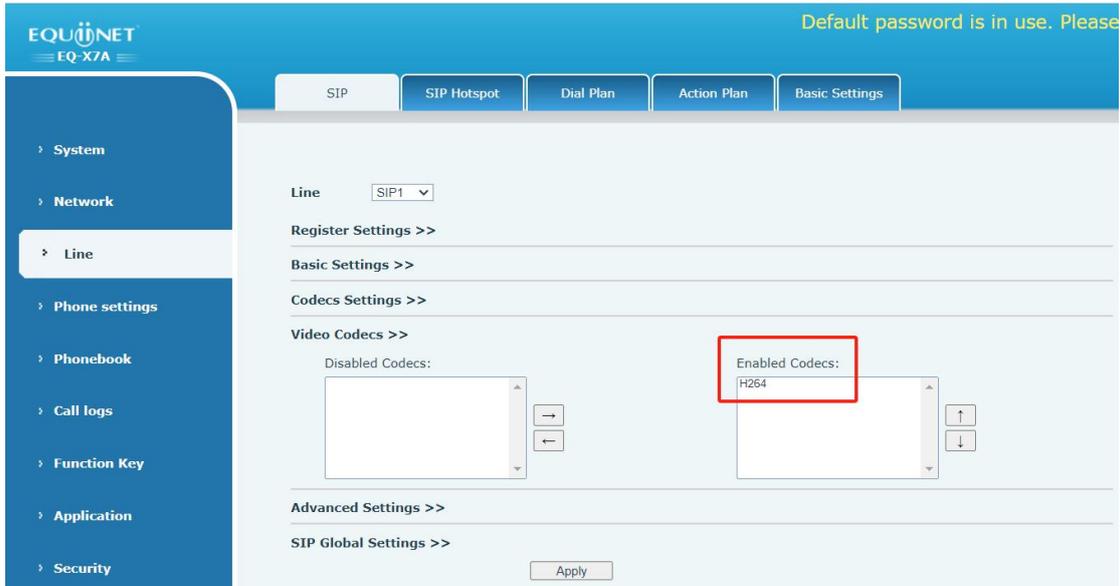

6. Function Key Setting.

When you press the function key, the device will call out the set phone number. It can also be used to set the IP address, press the function key to make an IP direct call.

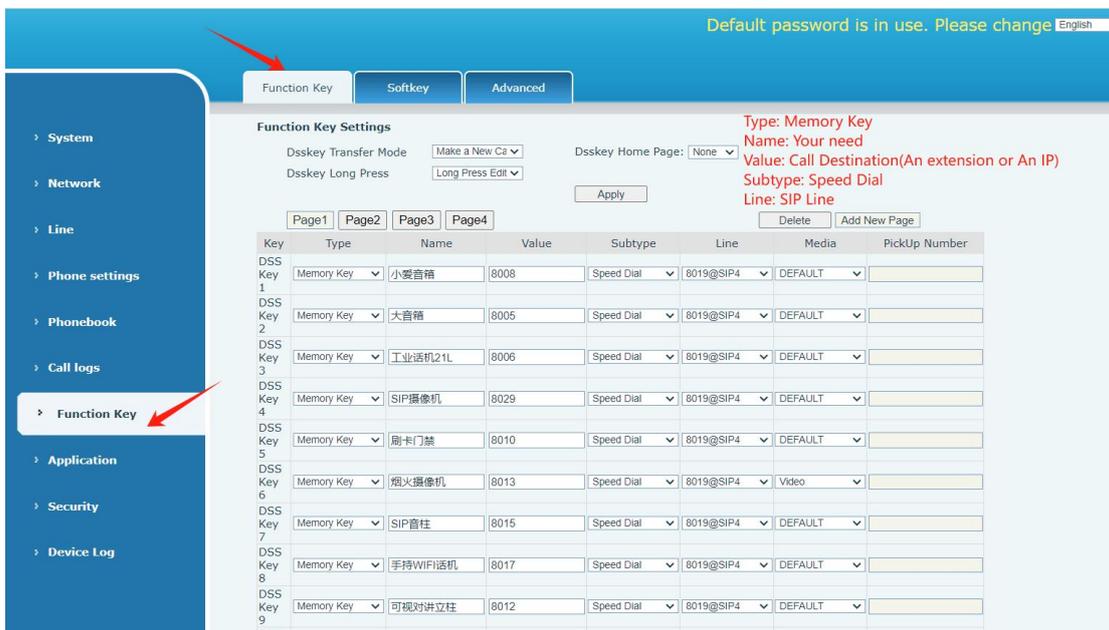

7. Volume Setting. Phone Setting>Sound>Volume

