


1. Power on the phone by long press the hang up key.




2. Wi-Fi Connecting. Menu>Wi-Fi

Connect to your Wi-Fi in available network.

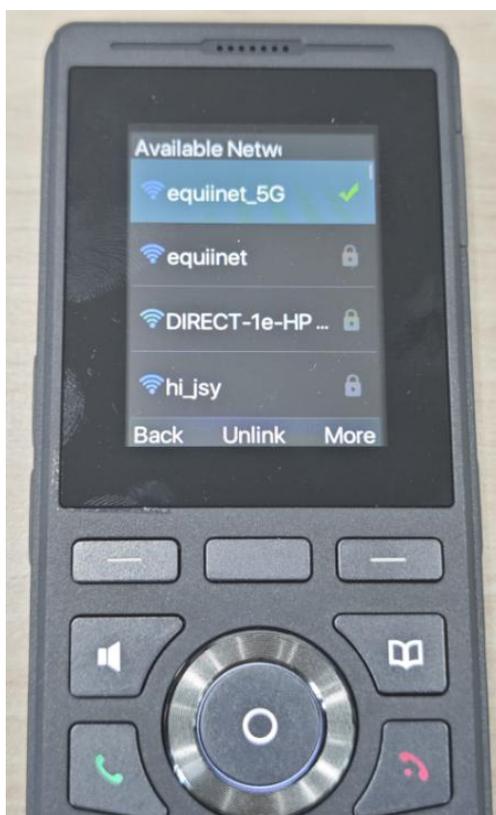


After connecting, go to Menu>Status>Network to check the network

information.

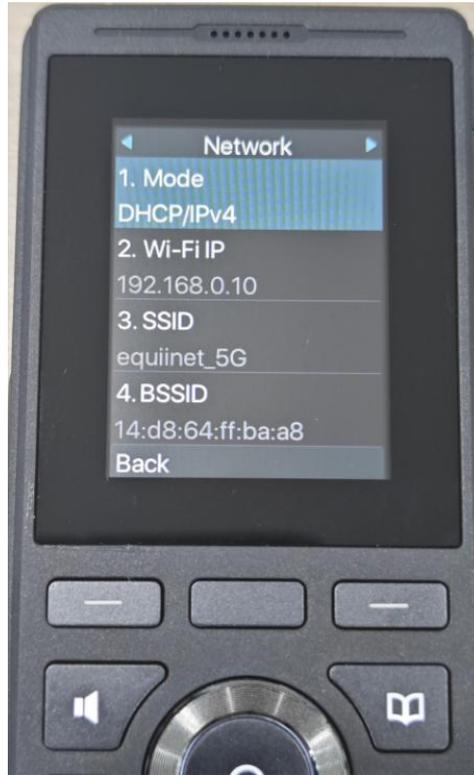


3. Enter the IP on the browser(recommend Google Chrome)

Both default User and Password are admin

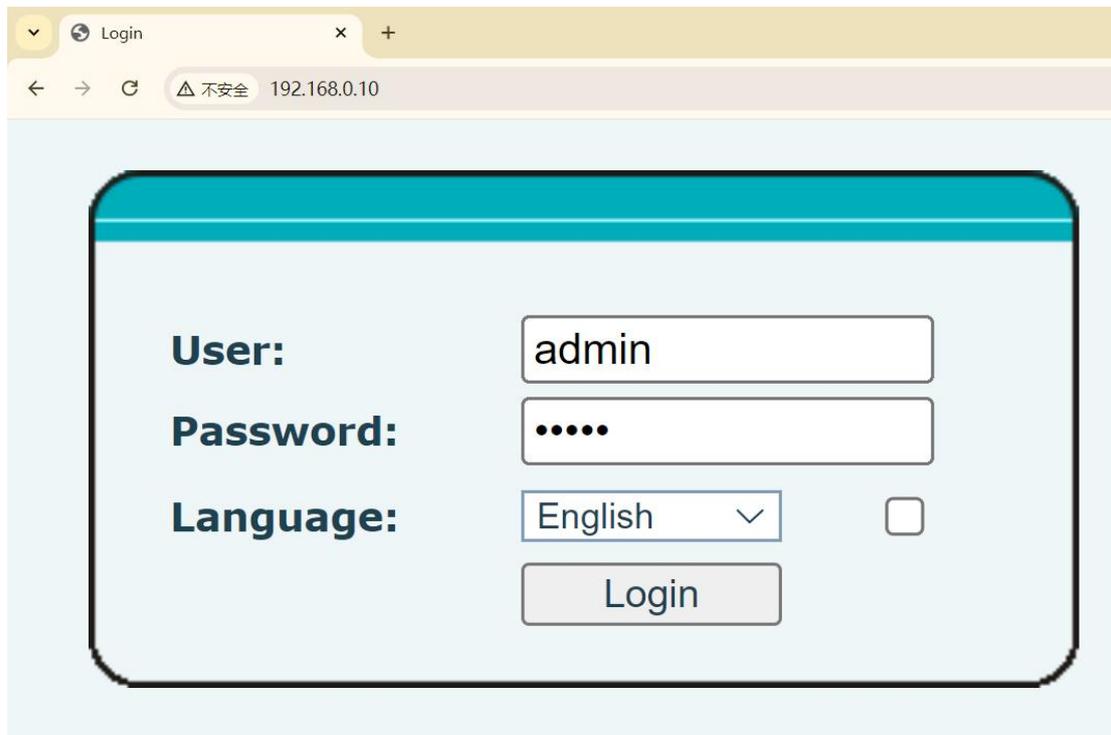

4. Network Setting.

After applying, entering the new IP to access the web.

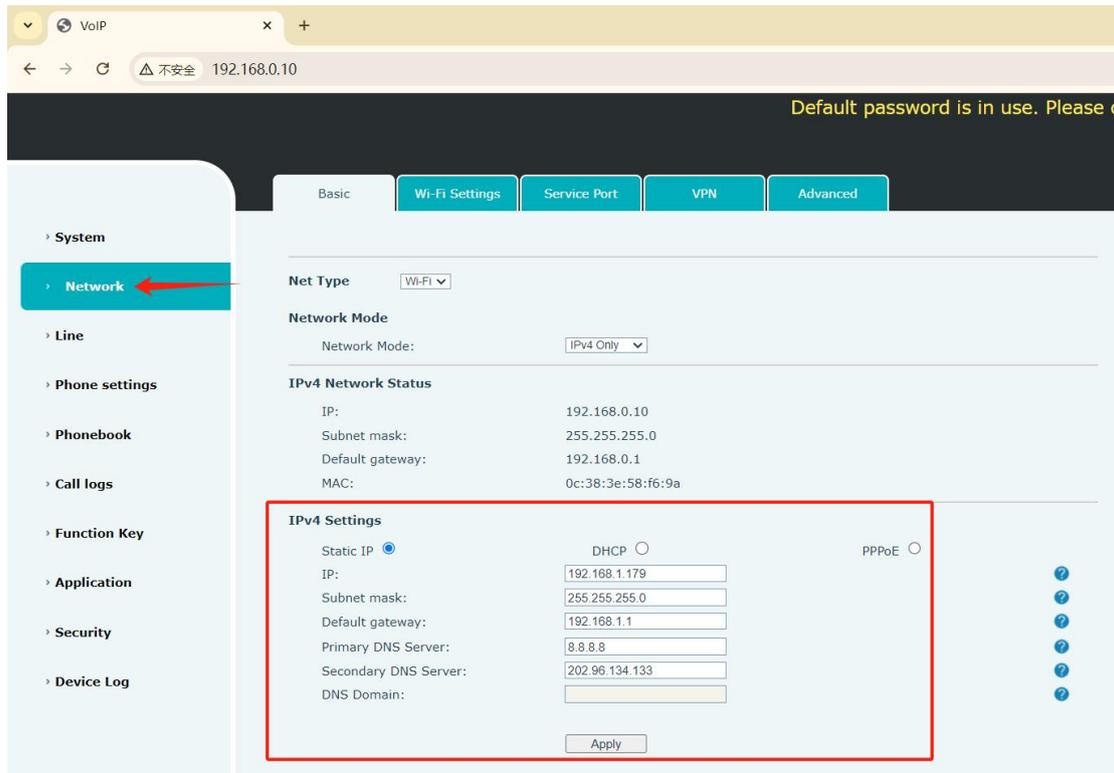

5. SIP Setting.

Line>SIP. The pic below only for reference, fill in your actual info please.

Then click on supply to save.

Default password is in use. Please ch

SIP SIP Hotspot Dial Plan Action Plan Basic Settings RTPC-XR

Line 8017@SIP1

Register Settings >>

Line Status: Registered Activate:

Username: 80172 Authentication User: 80172

Display name: 8017 Authentication Password: ****

Realm: Server Name:

SIP Server 1:

Server Address: 192.168.0.19

Server Port: 5060

Transport Protocol: UDP

Registration Expiration: 3600 second(s)

Proxy Server Address:

Proxy Server Port: 5060

Proxy User:

Proxy Password:

SIP Server 2:

Server Address:

Server Port: 5060

Transport Protocol: UDP

Registration Expiration: 3600 second(s)

Backup Proxy Server Address:

Backup Proxy Server Port: 5060

Basic Settings >>

Codecs Settings >>

Codecs Setting

Audio Codecs. If you do not need such G.722 codecs. We recommend only enable G.711U&G.711A.

Default password is in use. Please

SIP SIP Hotspot Dial Plan Action Plan Basic Settings RTPC-XR

Line 8017@SIP1

Register Settings >>

Basic Settings >>

Codecs Settings >>

Disabled Codecs:

G.726-16

G.726-24

G.726-32

G.726-40

G.729AB

G.723.1

Enabled Codecs:

G.711U

G.711A

Advanced Settings >>

SIP Global Settings >>

Apply