

1. IP Phone Installation

EQ-D21 supports POE supply and external power adapter DC5V0.6A.

EQ-D21W supports external power adapter DC5V0.6A only.



2. If connect to a POE Switch with DHCP, go to Manual>Status to check the IP.




Without DHCP, unable to get a IP. We should set a IP manually. Go to Menu>Settings>Advanced Settings(Password:admin)>Network>Lan Port>IPv4, change the Network mode to Static, use the ↑ and ↓ keys to set your IP, subnet mask and gateway etc.



Wi-Fi Connecting(Only EQ-D21W Supports)

Go to Menu>Wi-Fi Settings, enable the wireless, use ↓ keys to find your Wi-Fi and connect.

Notice: If there are such characters like ‘*!@\$’ in your password, press * key to input in ‘abc’ input-method.

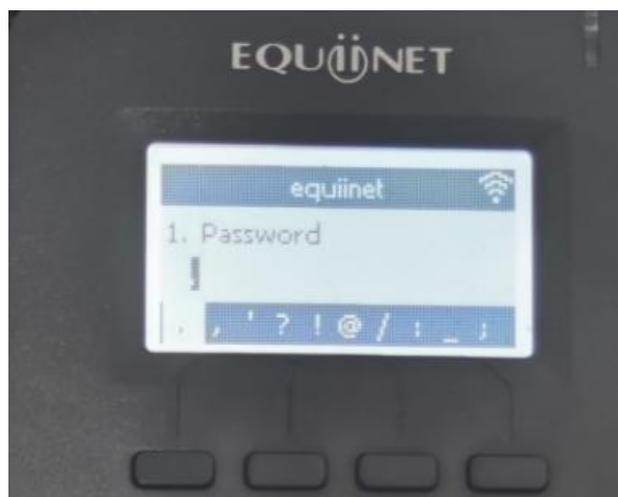




3. Enter the IP on the browser(recommend Google Chrome)

Both default username and password are admin



4. Network Setting. Network>Basic>IPv4 Config

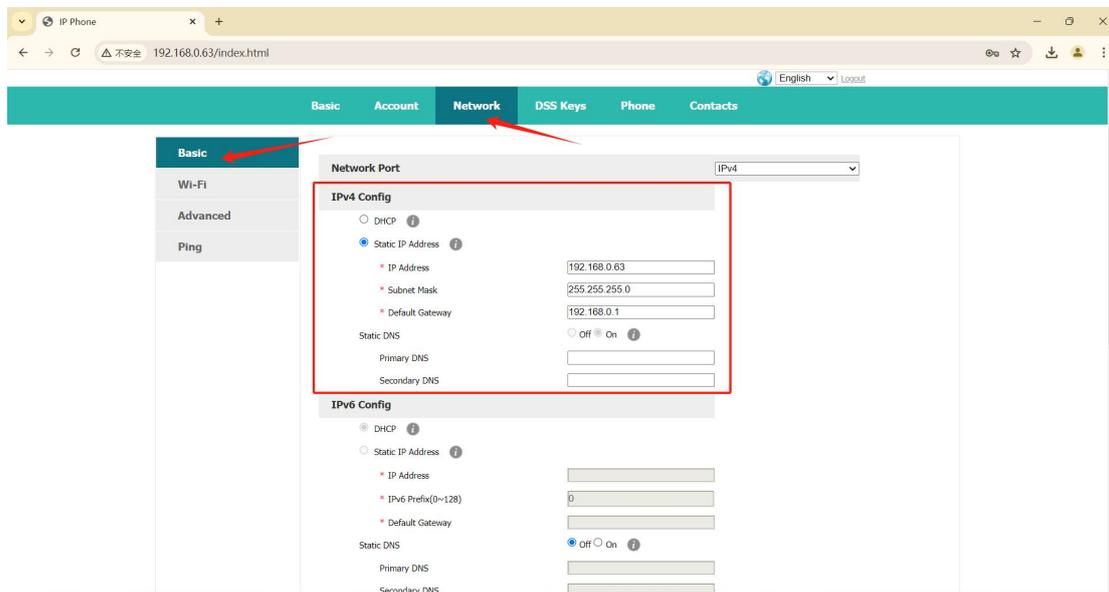

5. SIP Setting

Line>SIP. The picture below only for reference, fill in your actual info please. Then click on confirm to complete registration. **Register Status:**

Registered

English Logout

Basic Account Network DSS Keys Phone Contacts

Basic

Codecs

Advanced

Account Account 1

Register Status Registered

Account Active **Enabled** Enabled

Label **Your need** 8003

Display Name **Your need** 8003

Register Name **Extension Number** 80032

* User Name **Extension Numer** 80032

Password **Extension's Password** ****

* SIP Server **IPPBX's IP Port:5060** 192.168.0.19 Port 5060

SIP Redundancy Server Port 5060

Enable Outbound Proxy Server Disabled

Outbound Proxy Server Port 5060

Enable Peer-to-Peer Disabled

Transport Type UDP

TLS Version TLS 1.0

TLS Server Verification Disabled

NAT Traversal Disabled

STUN Server Port 3478

Voice Mail

It can also be configured on the phone

Go to “Menu>Settings>Advanced Settings(password:admin)>Accounts”,
select an account to configure.

