### EQU

#### 1. EQ-i11S One-button Intercom supports POE supply.

#### 2. Device IP Address

**If connect to a POE Switch with DHCP,** long press the button for 3s, there will be a toot sound last for 5s, please press the button once within 5s, it will report the IP.

Without DHCP, unable to get a IP. Long press the button for 3s, hear the toot, press 3 times quickly within 5s to switch to the static IP mode. The static IP: 192.168.1.128.

**3. Enter the IP on the browser (recommend Google Chrome)** Both default User and Password are admin

<ul> <li>→ C ▲ 不安全 192.168.0.215</li> <li>User: admin</li> <li>Password: ••••••</li> </ul>
User: admin Password: •••••
Password:
Password: ·····
Language: English V
Login

4. Network Setting. Here to set the IP.

## EQU

After applying, entering the new IP to access the web.

VoIP	× +		- o ×
← → C ▲ 不安全 192.	168.0.215		🖈 🚨 E
			Default password is in use. Please change Enten ✓ ✓ Logout (admin) ✓ Keep Online
	Basic Service Port	VPN Advanced	
› System			
> Network	Network Mode Network Mode:	IPv4 Only 🗸	
> Line	IPv4 Network Status		
Intercom settings	IP: Subnet mask: Default gateway:	192.168.0.215 255.255.255.0 192.168.0.1	
→ Call List	MAC:	00:d8:4a:08:2d:f7	
> Function Key	IPv4 Settings Static IP 💿	DHCP O	PPPae O
> Security	IP: Subnet mask:	192 168.0.215 255 255 255 0	
> Device Log	Default gateway: Primary DNS Server:	192.168.0.1 192.168.0.1	
> Security Settings	Secondary DNS Server : DNS Domain:	114.114.114	
> Platform Access		Apply	
		Current Softwa	are Version: 2.12.44.6

#### 5. SIP Setting

**Line>SIP**. The pic below only for reference, fill in your actual info please.

Then click on supply to save.

	Default password is in use. Please change English 🗸 🖉 Logo									
							🎽 Keep Online			
	SIP SIP Hots	pot Action Plan	Basic Settings	Paging Server						
> System	Line (entractory)		Username/A Display nam password: Ex	uthentication User: e: Your need ttension password	Extension number					
> Network		Line 8022@SIP* V								
	Register Settings >>		Server Port:	5060						
> Line	Line Status:	Registered	Activa	te:						
	Username:	80222	Auther	ntication User:	80222					
> Settings	Display name:	Display name: 8022								
	Realm:		Server	Name:						
> Call List										
	SIP Server 1:		SIP S	erver 2:						
Function Key	Server Address:	192.168.0.19	] Server	Address:						
	Server Port:	5060	] Server	Port:	5060					
> Security	Transport Protocol:	UDP V	Transp	ort Protocol:	UDP 🗸					
	Registration Expiration:	3600 second(s)	Regist	ration Expiration:	3600 second(s)					
> Device Log										
	Proxy Server Address:		Backu	p Proxy Server Address:						
Security Settings	Proxy Server Port:	5060	Backu	p Proxy Server Port:	5060					
	Proxy User:									
> Platform Access	Proxy Password:									
	Basic Settings >>									
	Codecs Settings >>									
			Current Softw	are Version: 2,12,44,6						

#### **Codecs Settings**

Audio Codecs. If you do not need such G.722 codecs. We recommend only enable G.711U&G.711A.

## EQU

	Default password is in use. Pleas
	SIP SIP Hotspot Dial Plan Action Plan Basic Settings
› System	
> Network	Line 8019@SIP- ~
> Line	Register Settings >> Basic Settings >>
› Phone settings	Codecs Settings >> Disabled Codecs: Enabled Codecs:
> Phonebook	G.729AB LBC Opus
> Call logs	
Function Key	Video Codecs >>
> Application	Advanced Settings >>
	SIP Global Settings >>
> Security	Apply
› Device Log	

Video Codecs. Enable the H.264 codecs.

					Default pa	ssword is in use. Please
	SIP	SIP Hotspot	Dial Plan	Action Plan	Basic Settings	
> System						
> Network	Line 801	19@SIP₄ ∨				
> Line	Register Settin Basic Settings	gs >> >>				
› Phone settings	Codecs Setting	s >>				
> Phonebook	Video Codecs > Disabled Co	•> odecs:		Enable	ed Codecs:	
› Call logs		<u>م</u>		11204		
› Function Key		-				↓
Application	Advanced Setti	ngs >>				
> Security	SIP Global Sett	ings >>	Apply			

### 6. Volume Setting

Intercom Settings>Media Settings>Media Settings

The bigger number the louder volume.

# EQUÜNET

	Features	Media Settings	Camera Se	ettings	MCAST	Action	Time/Date	Time
System								
	Codecs Settings	>>						
letwork	Media Settings >	» <del>(</del>						
6	Default Ping	Turnet	1 wav	v				
e	Call Volume:	Type.	3	(0~9)				
	Media Volum	e:	3	(0~9)				
ercom settings	Speakerphon Volume:	e SignalTone	3	(0~9)				
at .	DTMF Pavloa	d Type:	101	(96~127)				
	Handfree Mic	Gain:	3	(1~9)				
n Kou	OPUS Payloa	d Type:	107	(96~127)	OPUS	Sample Rate	OPUS-NB({ 🗸	1
кеу	ILBC Payload	Type:	97	(96~127)	ILBC	Payload Length	20ms 🗸	-
	Enable VAD:							
	Disable AEC:							
	Audio Profile:		Default 🗸					
g	H.264 Payloa	d Type:	117	(96~127)				
	Enable Line-o	out:	Disable	~				
lings	Audio Delay:		0	(0~1000	ms) Rtp (	Detection Timeout:	0	(0~3600
	Noise Reduct	ion Level:	Mid 🗸					
1 ACCESS	RTP Control Prot	ocol(RTCP) Setti	ngs >>					

### 7. Function Key Setting.

When you press the function key, the device will call out the set phone number. This button can also be used to set the IP address, press the function key to make an IP direct call.

							Defaul	t p	assword	is i	n use. I	lease
› System	4		Type: Men Name: You	nory Key Ir need			Subt	ype	: Speed	Dial		
> Network	Function Key Settings >> Value: Call Destination(An ext		extensio	extension or an IP)			Line					
	Key	Туре	Name	Value			Subtype	2	Line		Media	1
> Line	DSS Key 1	Memory Key	i11S	8019	+	-	Speed Dial	~	8023@SIP1	~	DEFAULT	~
	DSS Key 2	None 🗸			+	-	None	~	AUTO	~	DEFAULT	~
> Intercom settings					Apply							
> Call List	Program	mable Key Setti	ngs >>									
	Advance	d Settings >>										
<ul> <li>Function Key</li> </ul>												