


1. Connect the network port of the camera to the POE switch. The POE switch should be able to get an IP address automatically.
2. Installing this Camera Management Software, SADP.exe



SADP.exe


3. Use a computer under the same network to open the management software and search for the SIP camera. If it is the first installation, you need to set a new administrator password to activate it before you can modify the static IP address.

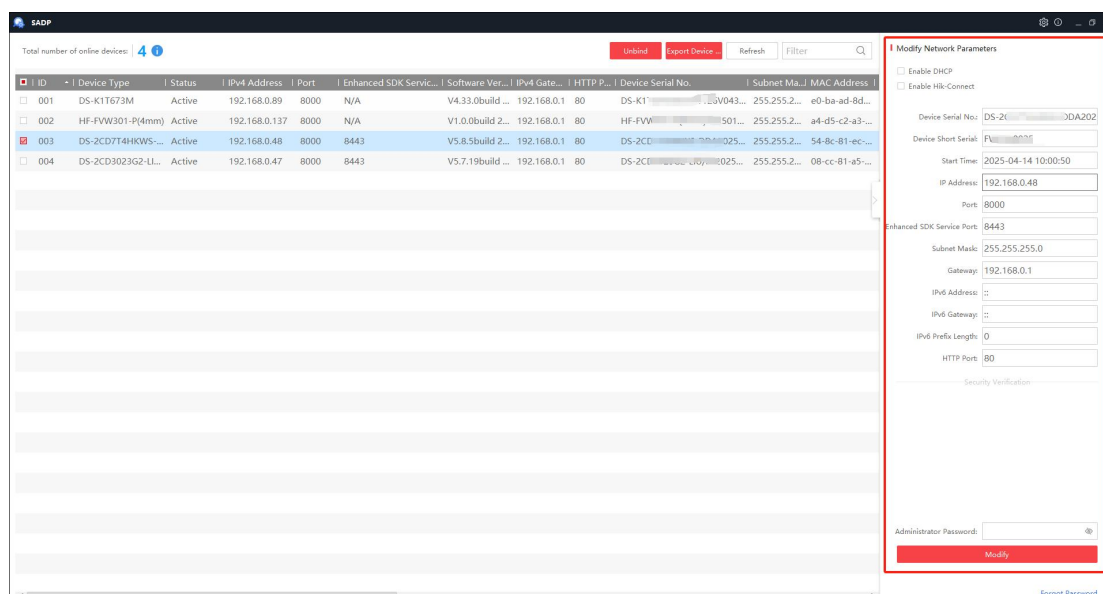

4. After setting the static IP address, access the IP through a browser to enter the camera's web page.


Username: admin

Password: The password you set in the third step.

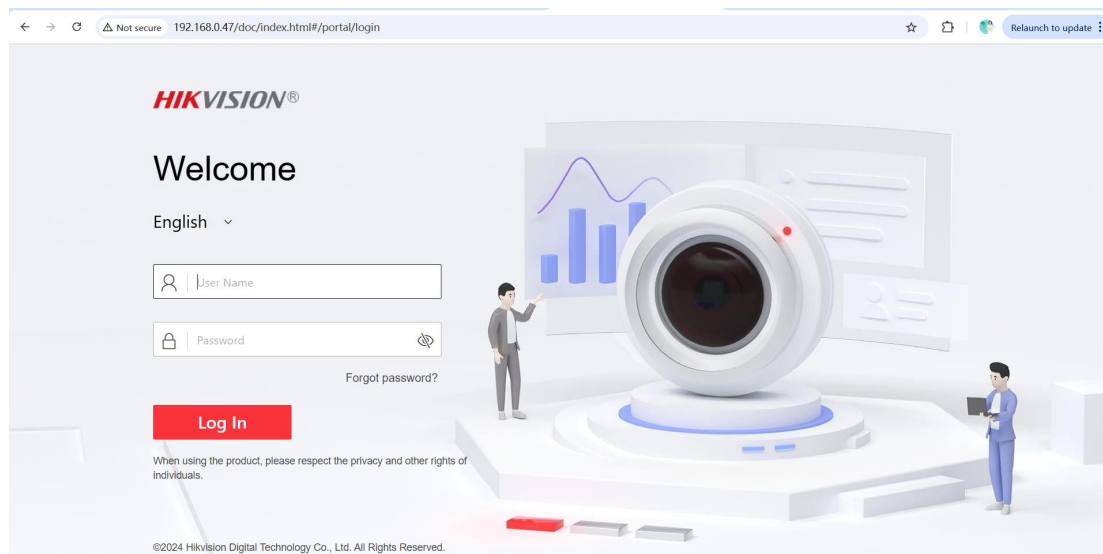

5. After login, enter this page. “Configuration>Network>Network Service>SIP”. Fill in the relevant registration information according to the prompts.

Please note: The information filled in the picture is for reference only. Please fill in your actual phone system information and do not directly copy the information in the picture!

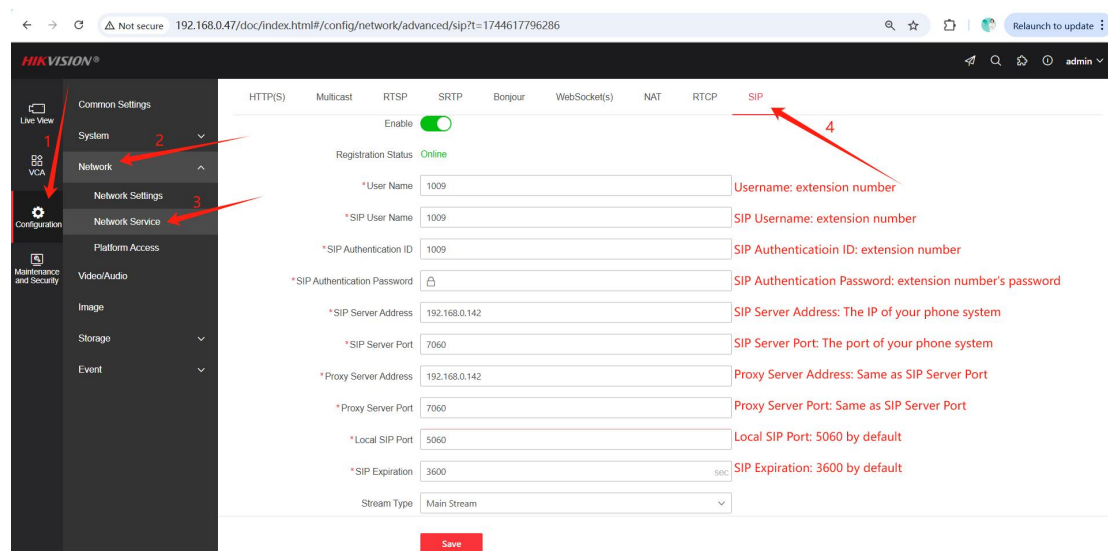

192.168.0.47/doc/index.html#/config/network/advanced/sip?t=1744617796286

Common Settings System Network Network Settings Network Service Platform Access Video/Audio Image Storage Event

HTTP(S) Multicast RTSP SRTP Bonjour WebSocket(s) NAT RTCP SIP

Enable ☒

Registration Status Online

*User Name 1009 Username: extension number

*SIP User Name 1009 SIP Username: extension number

*SIP Authentication ID 1009 SIP Authentication ID: extension number

*SIP Authentication Password SIP Authentication Password: extension number's password

*SIP Server Address 192.168.0.142 SIP Server Address: The IP of your phone system

*SIP Server Port 7060 SIP Server Port: The port of your phone system

*Proxy Server Address 192.168.0.142 Proxy Server Address: Same as SIP Server Port

*Proxy Server Port 7060 Proxy Server Port: Same as SIP Server Port


*Local SIP Port 5060 Local SIP Port: 5060 by default

*SIP Expiration 3600 SIP Expiration: 3600 by default

Stream Type Main Stream

Save

6. Video Setting. Please make sure the video Encoding is H.264.

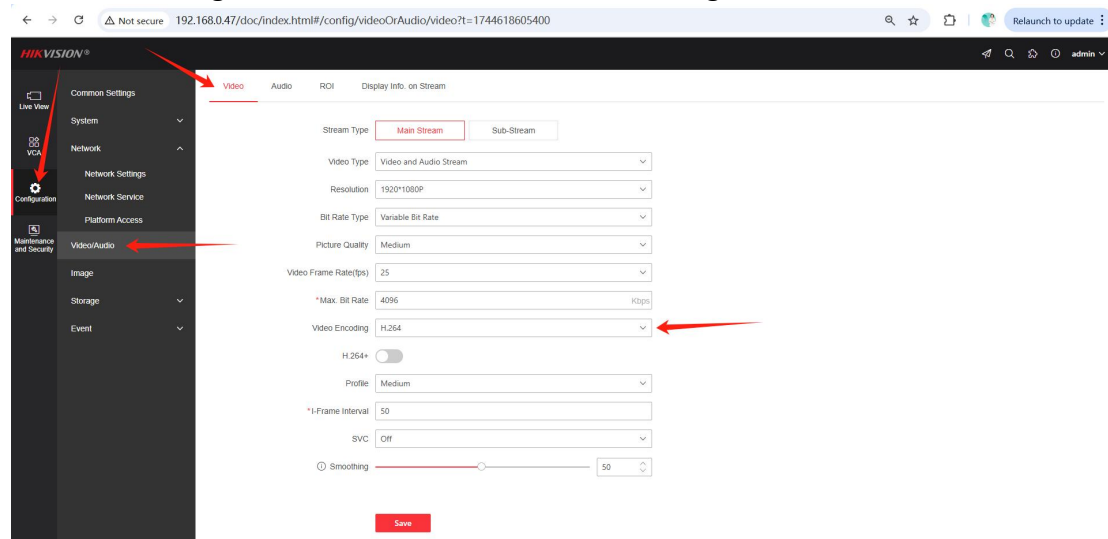

192.168.0.47/doc/index.html#/config/videoOrAudio/video?t=1744618605400

Common Settings System Network Network Settings Network Service Platform Access Video/Audio Image Storage Event

Video Audio ROI Display Info. on Stream

Stream Type Main Stream Sub-Stream

Video Type Video and Audio Stream

Resolution 1920*1080P

Bit Rate Type Variable Bit Rate

Picture Quality Medium

Video Frame Rate (fps) 25

*Max. Bit Rate 4096 Kbps

Video Encoding H.264

H.264+ ☐

Profile Medium

*I-Frame Interval 50

SVC Off

Smoothing 50

Save