


1. Access Control Installation

Access Control supports power adapter(DC12V3A).



2. After connecting the network cable, check the obtained network information in **COMM.>Ethernet**.

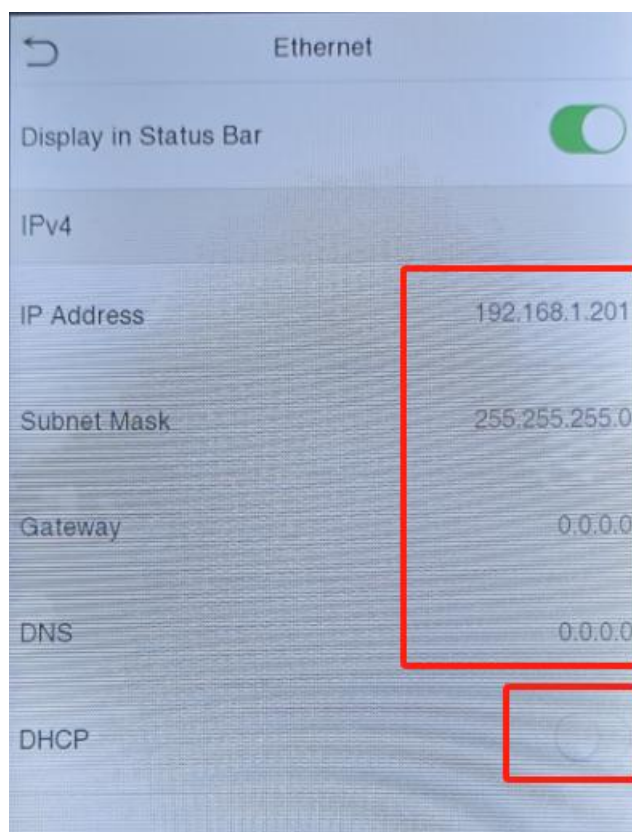


If you want to set a specific static IP address, you need to disable DHCP.

Then tap on IP address to set it.

3. Wi-Fi Settings.

The WIFI module is not a standard configuration. You can only configure it if you have purchased the WIFI module. Please note.

Main Menu > COMM. > Wi-Fi Settings

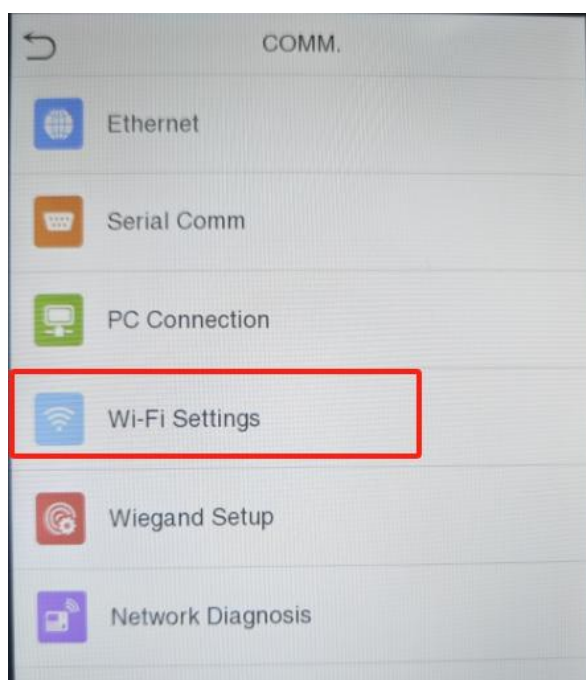


4. SIP Settings.


After SIP Settings done, it will be able to call other SIP devices.

Enter **Intercom>SIP Settings>Local Settings** for SIP setting.


Enable SIP Server.

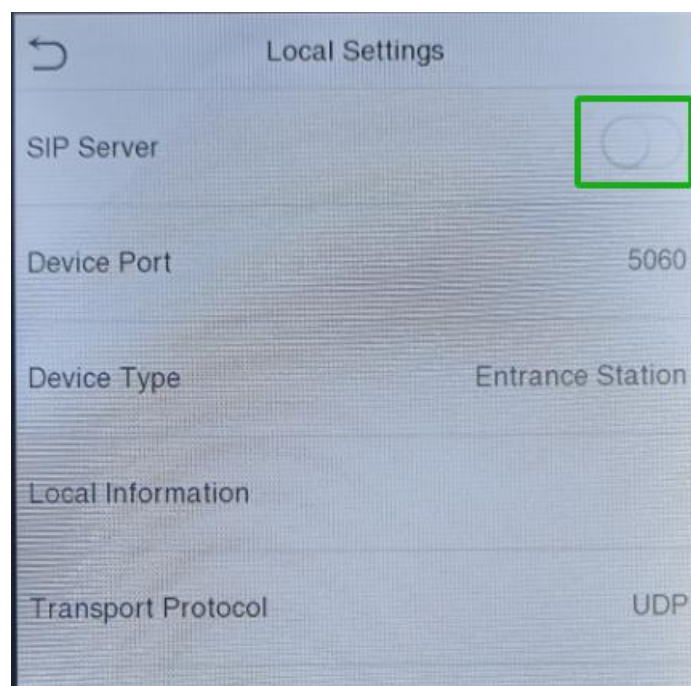

Change Call Number Type to SIP Account Number.

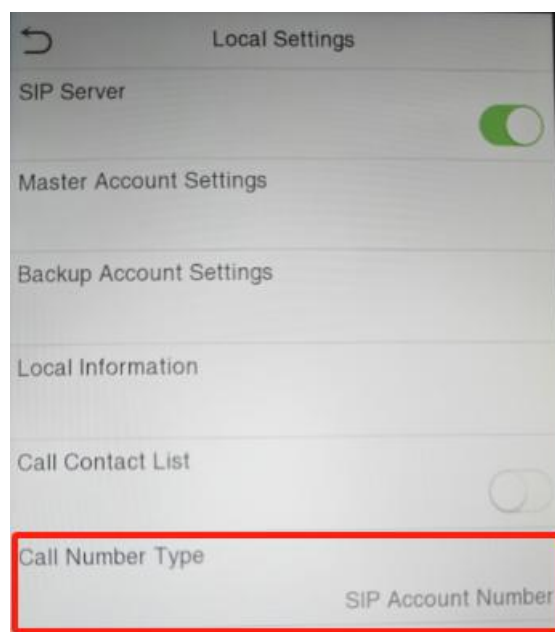

Click on “Master Account Settings” to configure SIP.

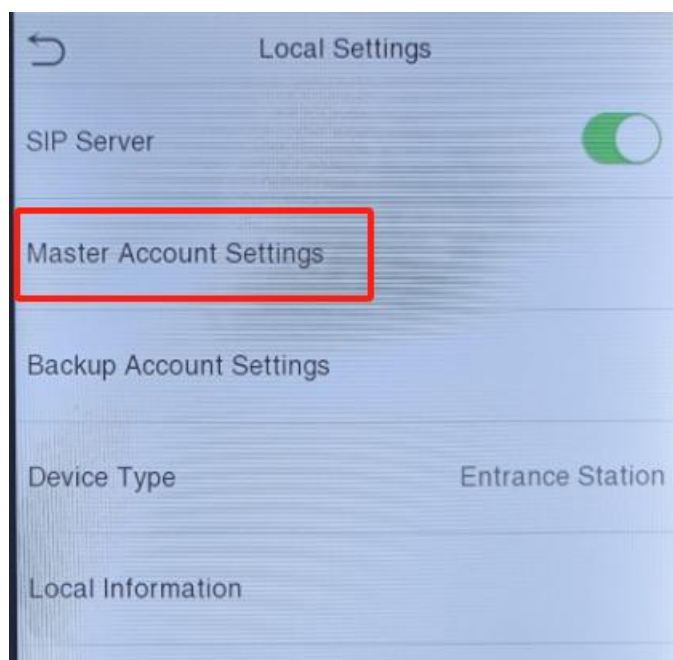

The screenshot shows the 'Master Account Settings' screen. At the top, there is a back arrow and the title 'Master Account Settings'. Below the title, there is a toggle switch for 'Master Account Settings' which is turned on. Below that is a toggle switch for 'Enable Domain Name' which is turned off. The following fields are: 'Server Address' with the annotation 'The IP of phone system'; 'Server Port' with the annotation 'The port of phone system' and the value '5060'; 'Display Name' with the annotation 'set your need, it's up to you'; 'User Name' with the annotation 'The extension number'; 'Verify ID' with the annotation 'The extension number'; 'Password' with the annotation 'Password of extension' and a masked input field '*****'; 'Network' which is a section header; and 'Transport Protocol' with the value 'UDP'.

Server Address: Input your phone system's IP address.

Server Port: Input the port of phone system for registering.

Display Name: Set your need, it's up to you.

User Name: Input the extension number you want to register.


Verify ID: same as User Name.

Password: Input the password of the extension number.

5. Calling Shortcut Setting.

Calling Shortcut allows you call someone with a single click rather than dialing the extension number.


Go to **Intercom>SIP Settings>Calling Shortcut Setting.**

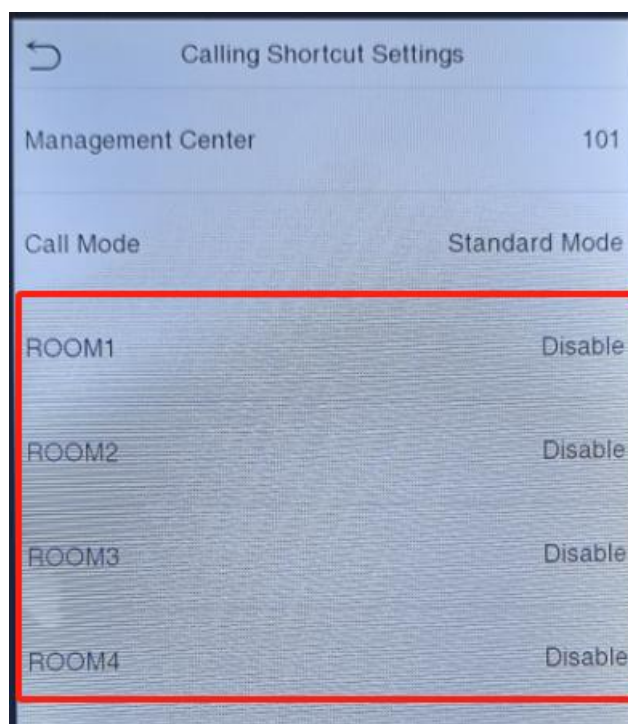


It supports 4 shortcut calling. You can click on them to set.

Name: set your need.

Device Number: set the extension number you want to call.

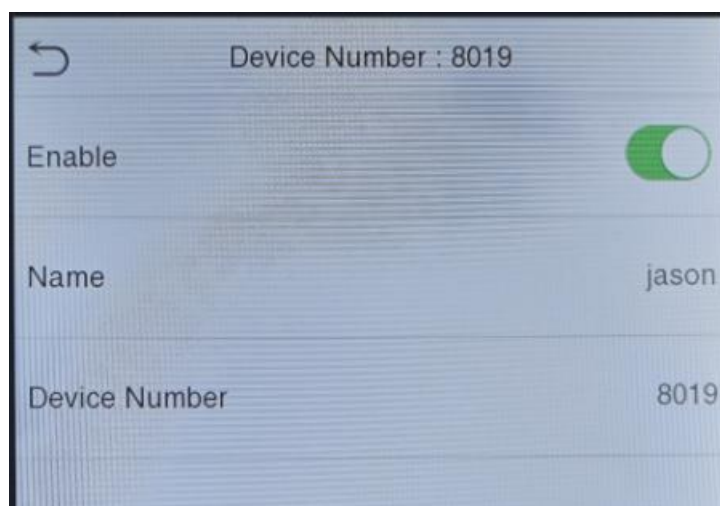

After setting, go back to dialing page, you will see the shortcut you set.

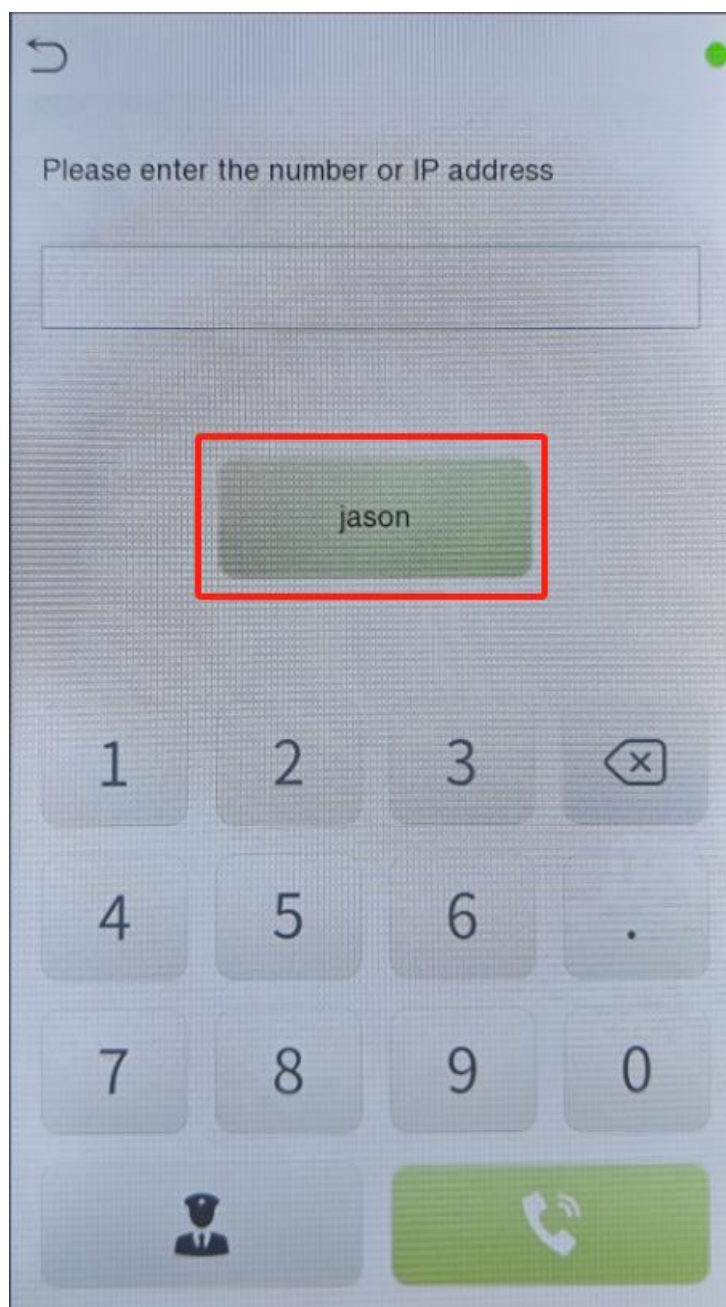

6. Time Setting

Go to **System>Data Time**. Set to your local time.

7. DTMF Setting.

When the door access is successfully connected to the digital door lock,

.....

DTMF enables you to input the corresponding DTMF values on the video intercom during a video call with the door access for remote door unlocking.

Go to **Intercom>SIP Settings>Advanced Settings**. The default DTMF is 1234. You can set your need.