


## 1. Mini Walkie-talkie Gateway Installation

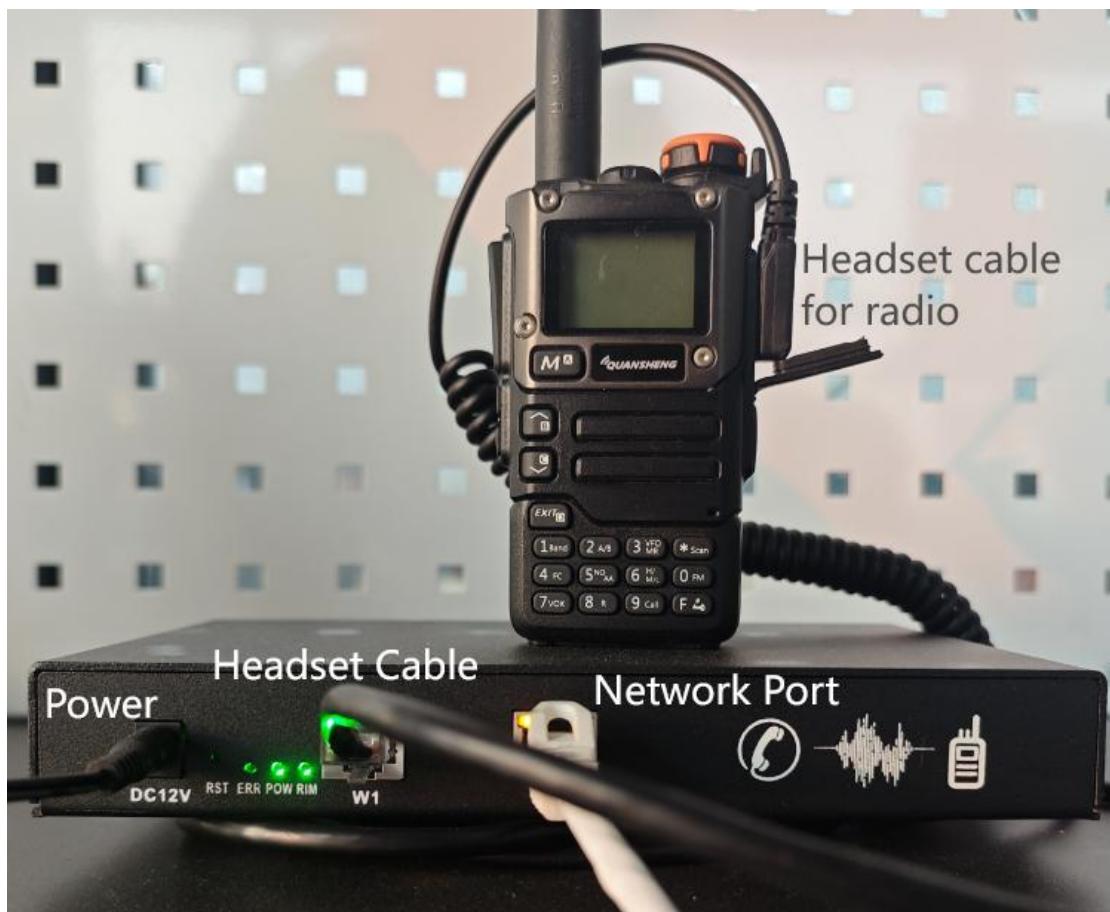


## 2. Enter the IP on the browser(recommend Google Chrome)

Default IP: 10.20.40.40


Default username: admin

Default password: 1

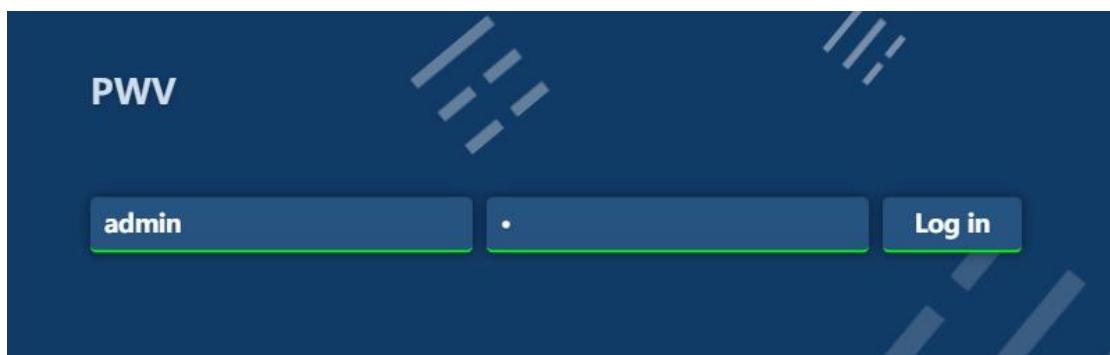


Hold press reset button for 10 seconds to reset. After reset, the IP is 10.20.30.1.

## 3. Network Setting. Basic>Network Settings

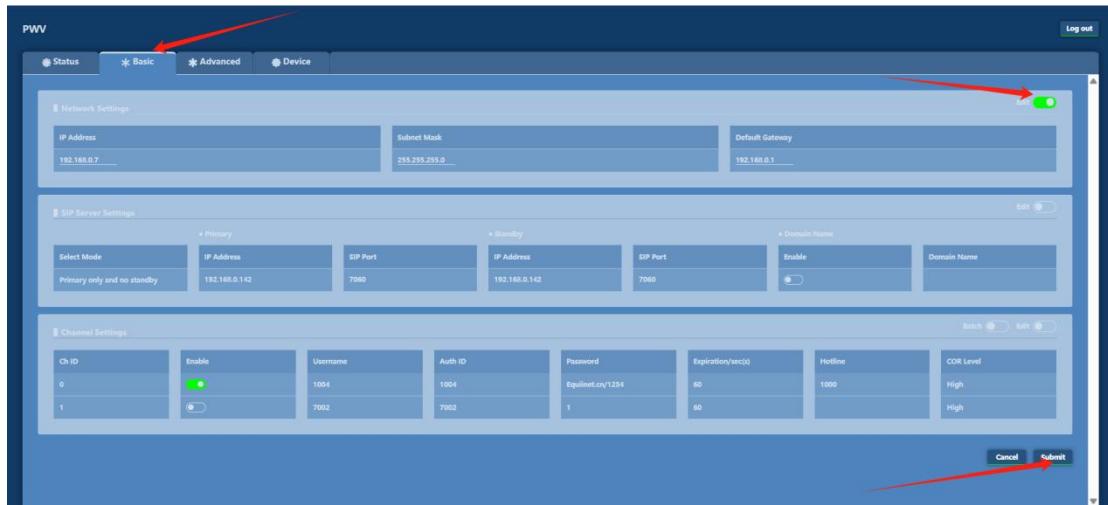

After submit, reboot to take effect.

#### 4. SIP Setting.

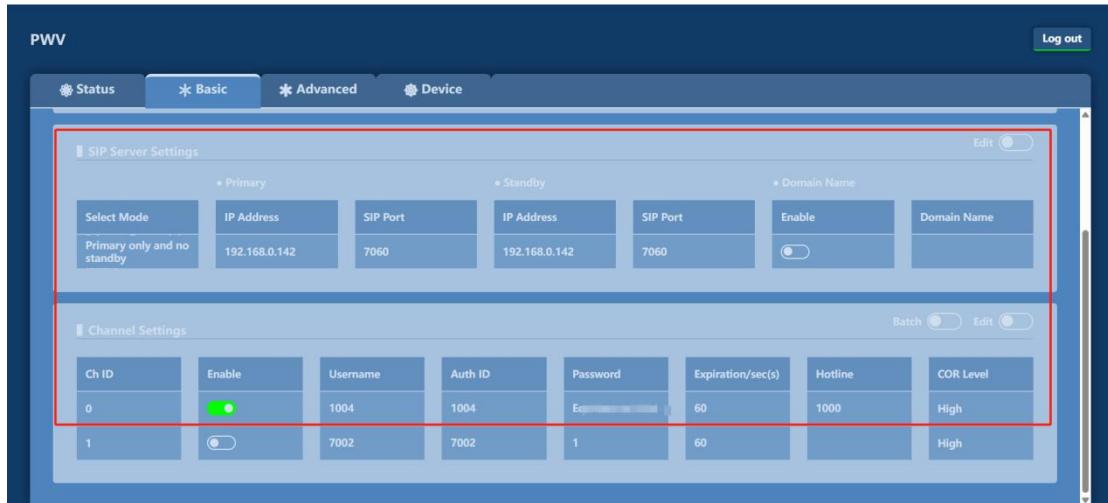

##### Parameters Description:

**Select Mode:** If only one IPPBX system, select Primary only and no standby.

**IP address:** The IP address of the Server

**SIP Port:** Registration port of IPPBX(default 5060)

**Channel Settings:** 0 and 1 are match to channel 1 and 2 port on the device.

**Username and Auth ID:** Extension number.

**Password:** Extension password.


**Expiration/sec(s):** Default 300s.

**Hotline:** Call Destination.

**COR Level:** Leave it as High.

After finishing SIP Settings, enter Status page to see registration status.

**Notice: Enable Auto refresh**

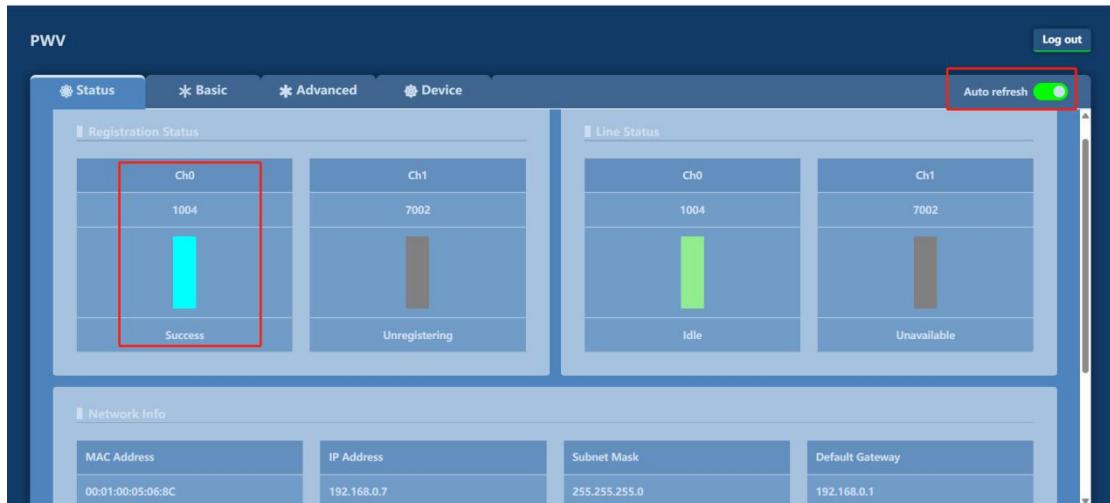

## 5. PTT Setting.

Detect Mode: VOX.

In VOX detect mode, when you hold press the PTT key of the walkie-talkie and speak something, it will call out by hotline.

