

1. Hotel Phone supports POE supply.



After connecting phone to POE switch, the status light will flash.



2. Device IP Address.


If connect to POE Switch with DHCP, hold press the '#' key for 3s, it will report the IP.




Without DHCP, unable to get a IP. Dialing this code, '#*100', to switch to static IP. The static IP: 192.168.1.128.

3. Enter the IP on the browser (recommend Google Chrome)

Both default username and password are admin

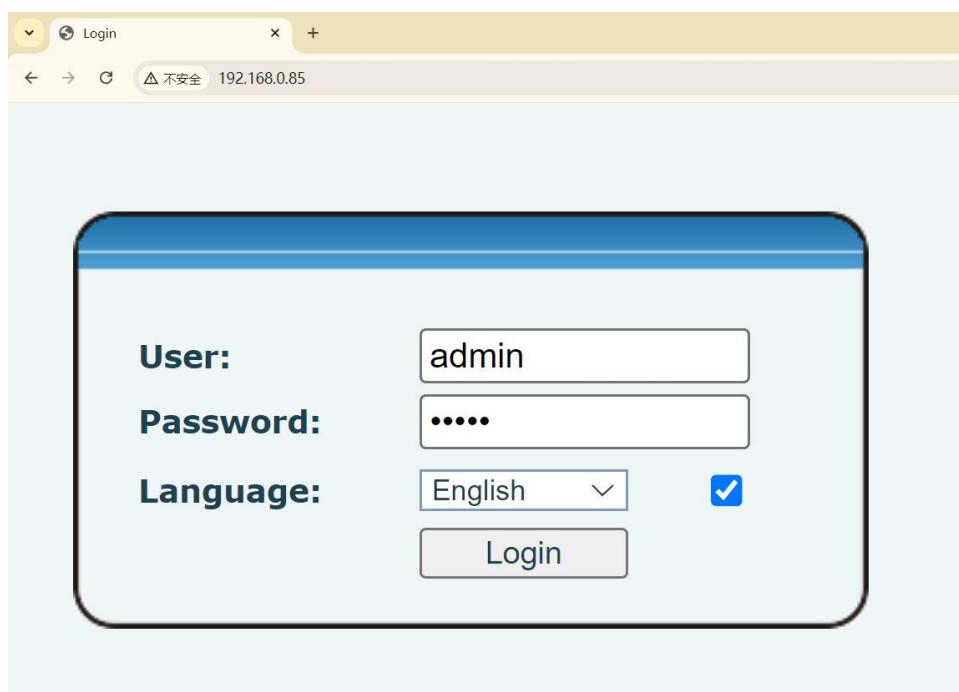


4. Network Setting. Here to set the IP.

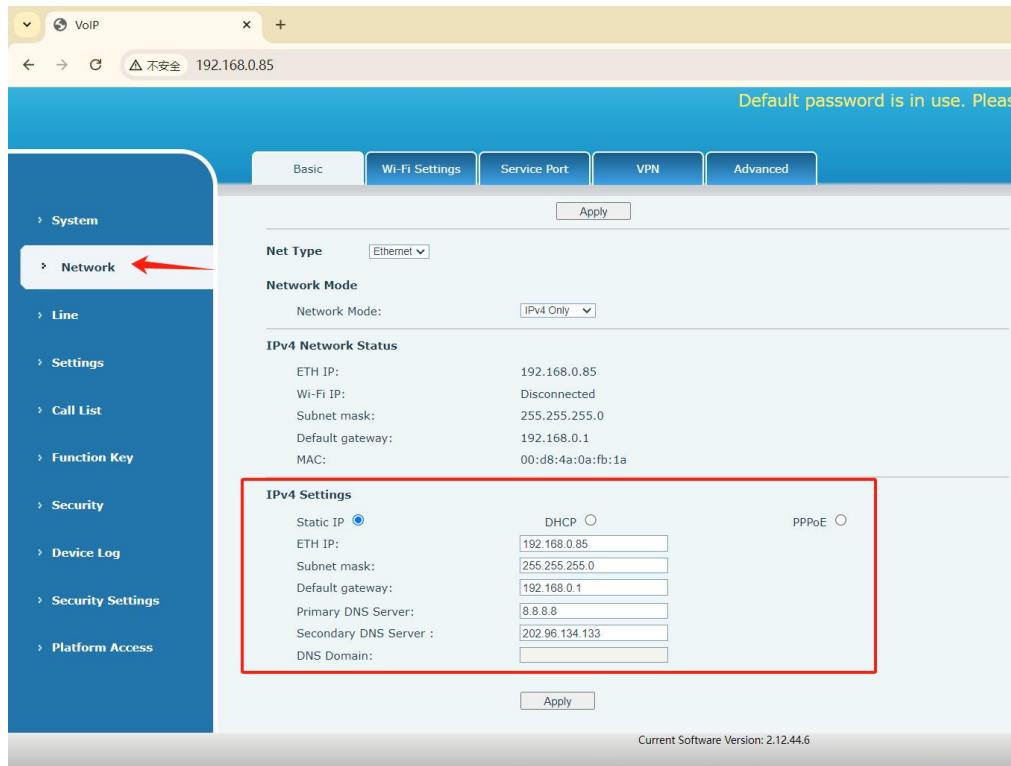

5. SIP Setting.

Line>SIP. The pic below only for reference, fill in your actual info please.

Then click on supply to save.

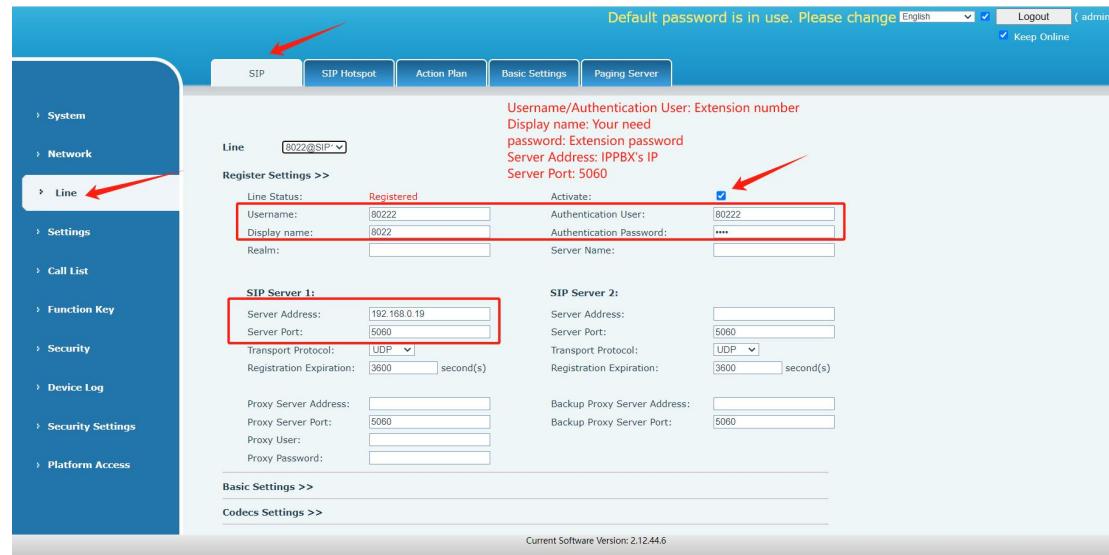

Codecs Settings

Audio Codecs. If you do not need such G.722 codecs etc. We recommend

only enable G.711U&G.711A.

